

FIG. 1

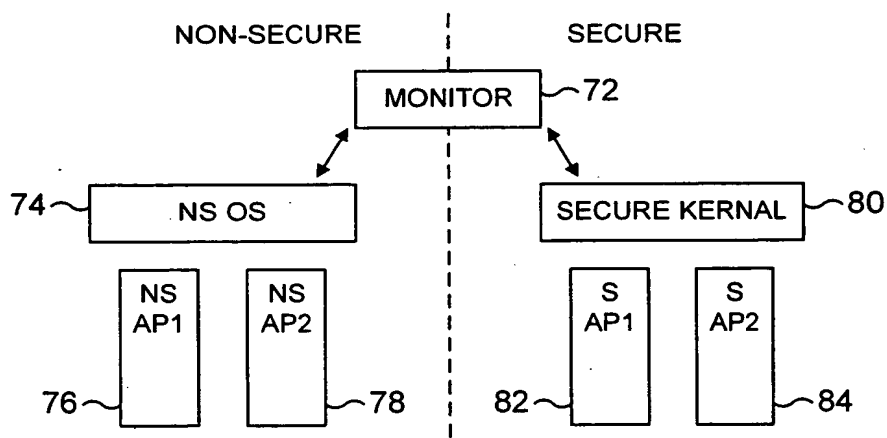


FIG. 2

2 / 56

		<u>DOMAIN</u>	
		NON-SECURE	SECURE
<u>MODE</u>		MONITOR	
	1	NS MODE 1	S MODE 1
	2	NS MODE 2	S MODE 2

FIG. 3

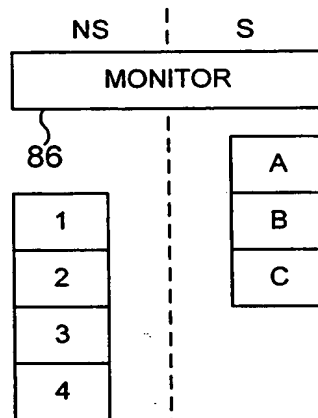


FIG. 4

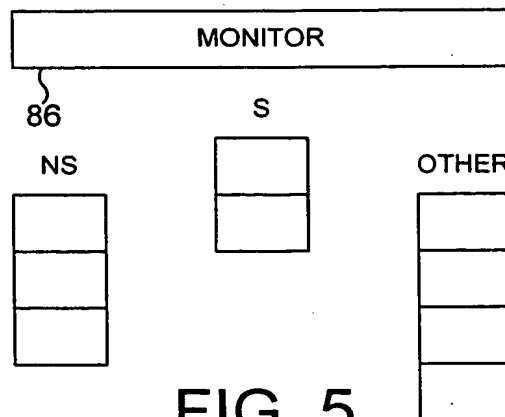


FIG. 5

// = PRIVATE TO MODE

FIG. 6

4 / 56

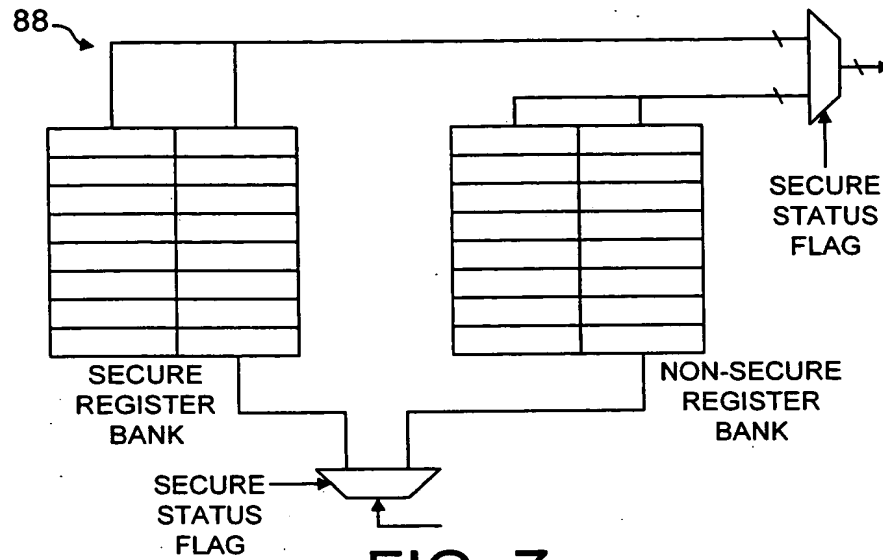


FIG. 7

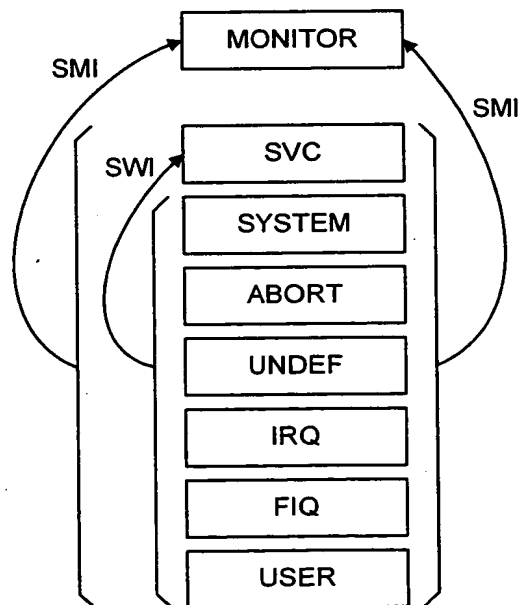


FIG. 8

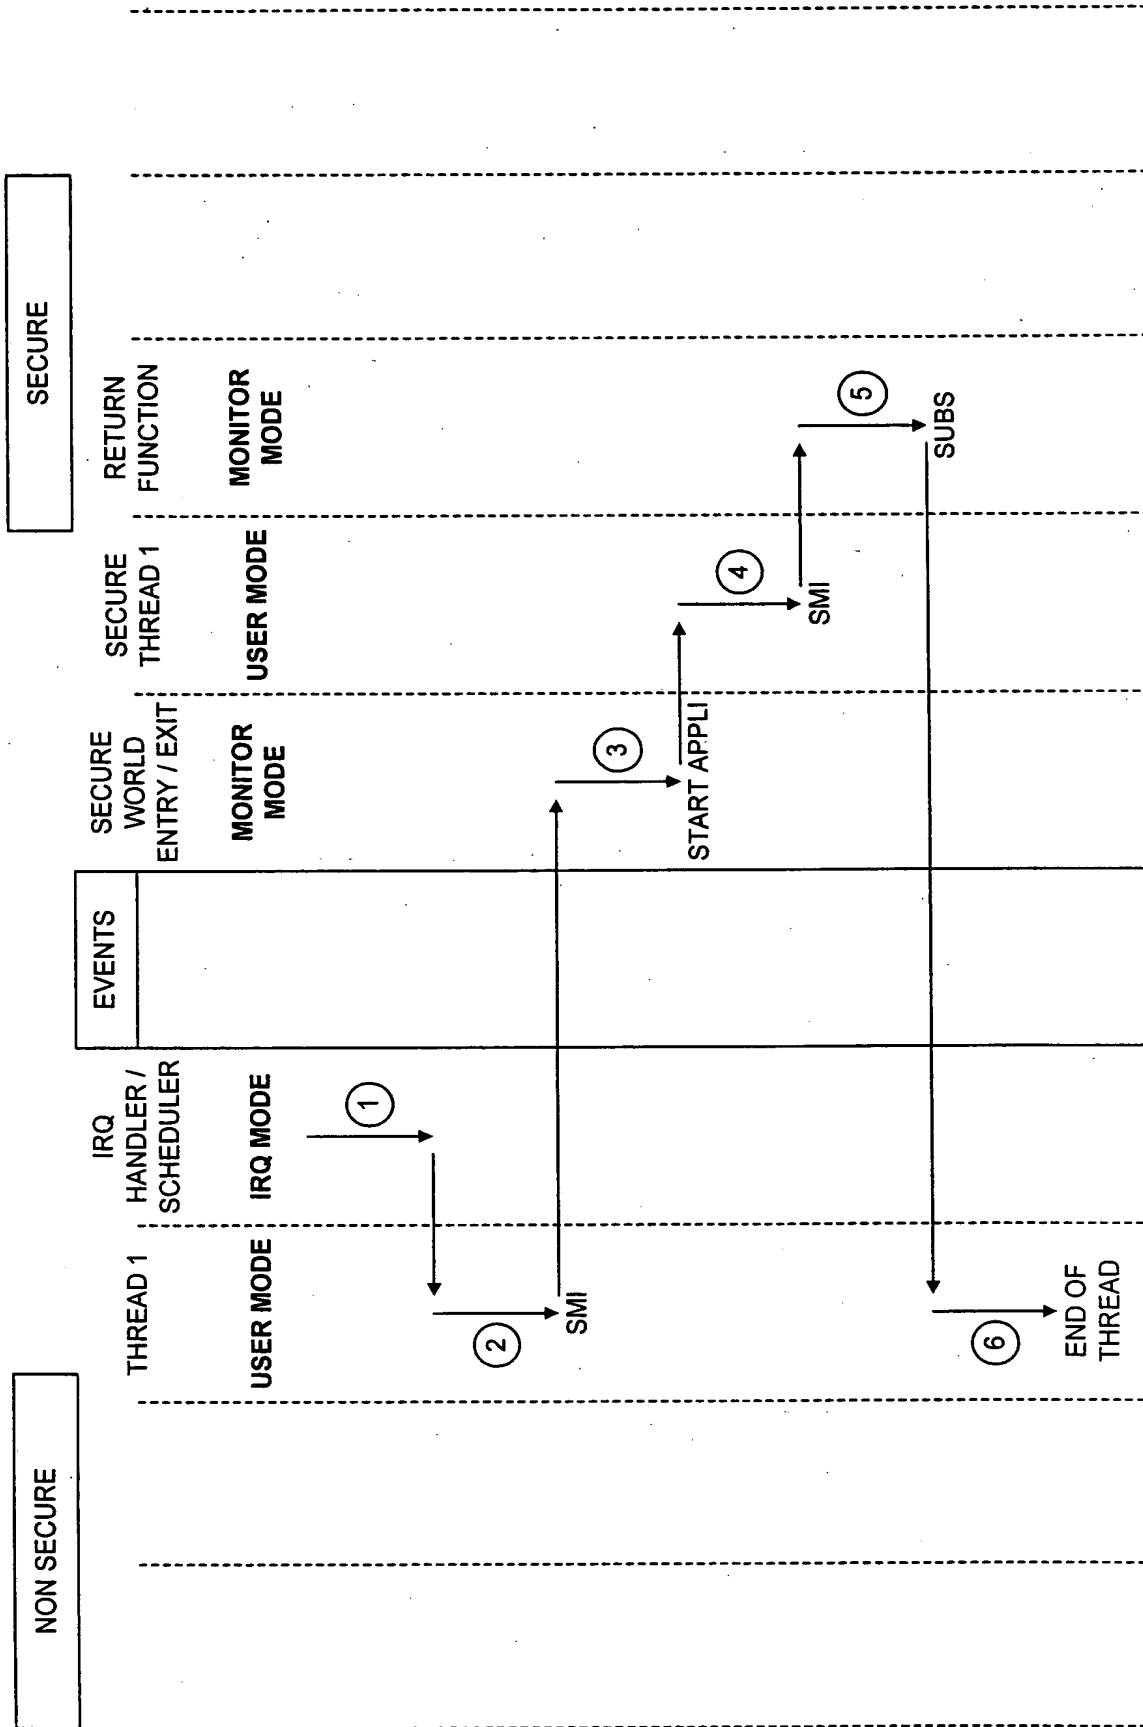


FIG. 9

6 / 56

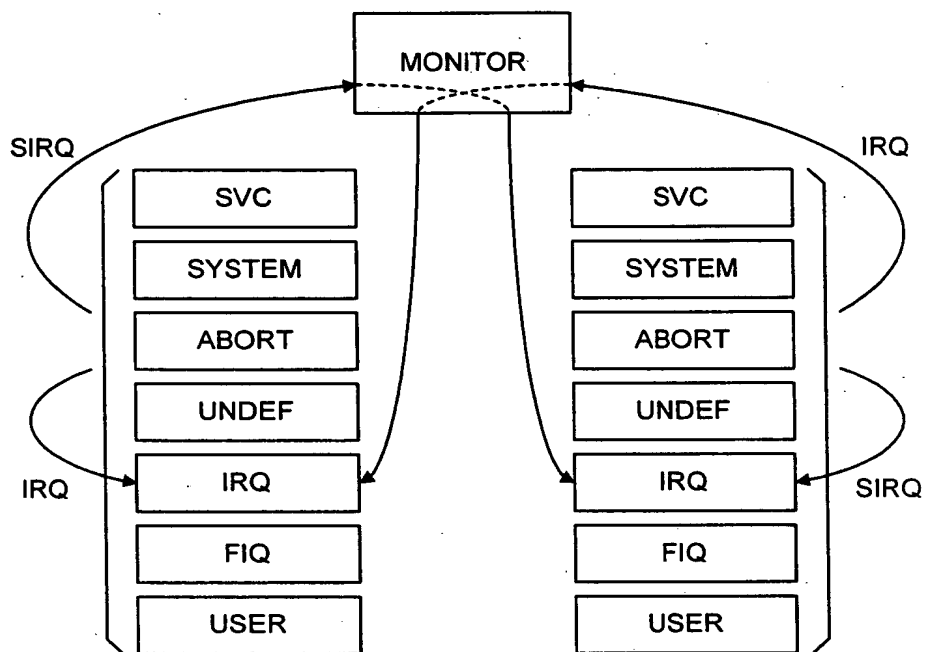


FIG. 10

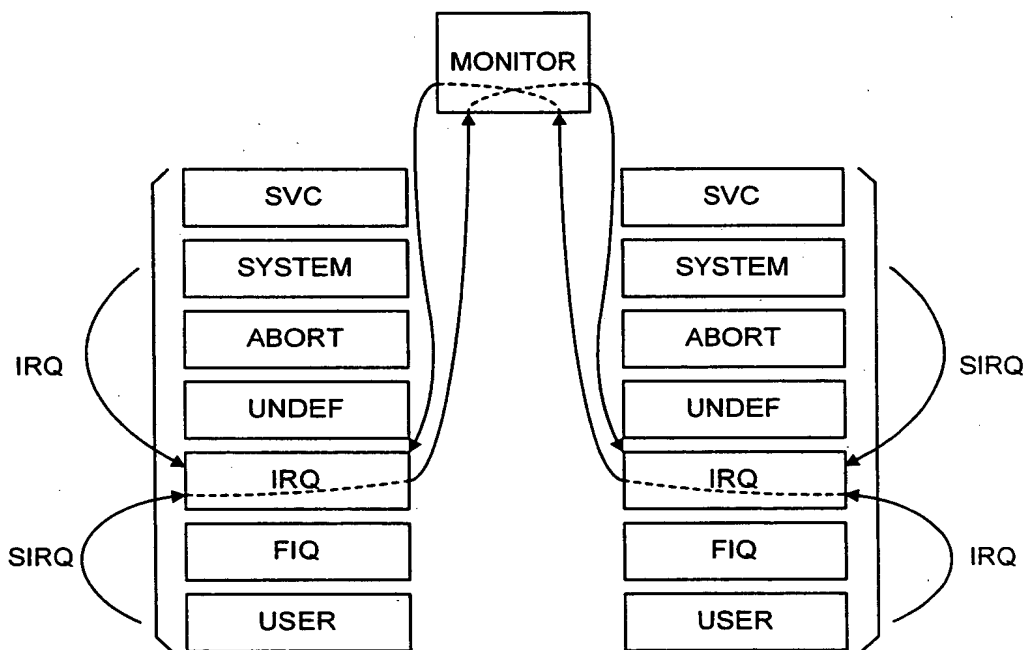
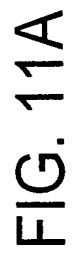


FIG. 12



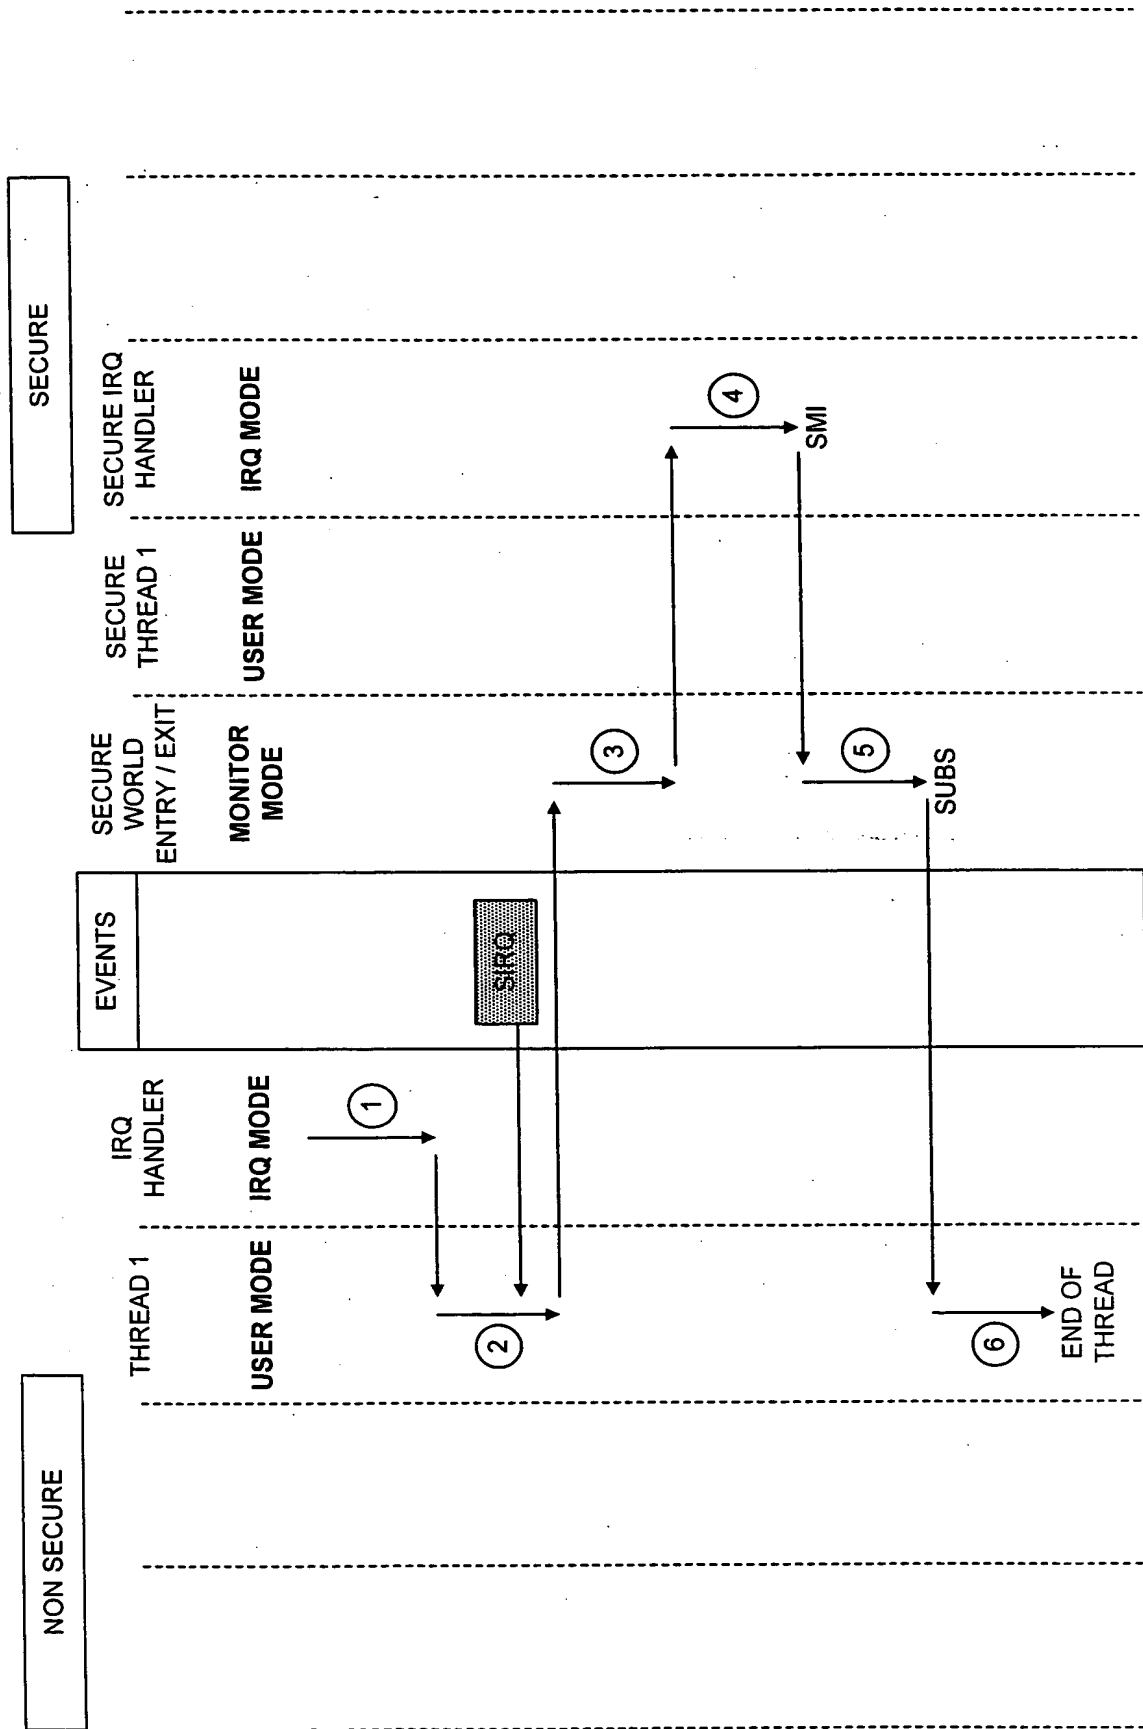


FIG. 11B

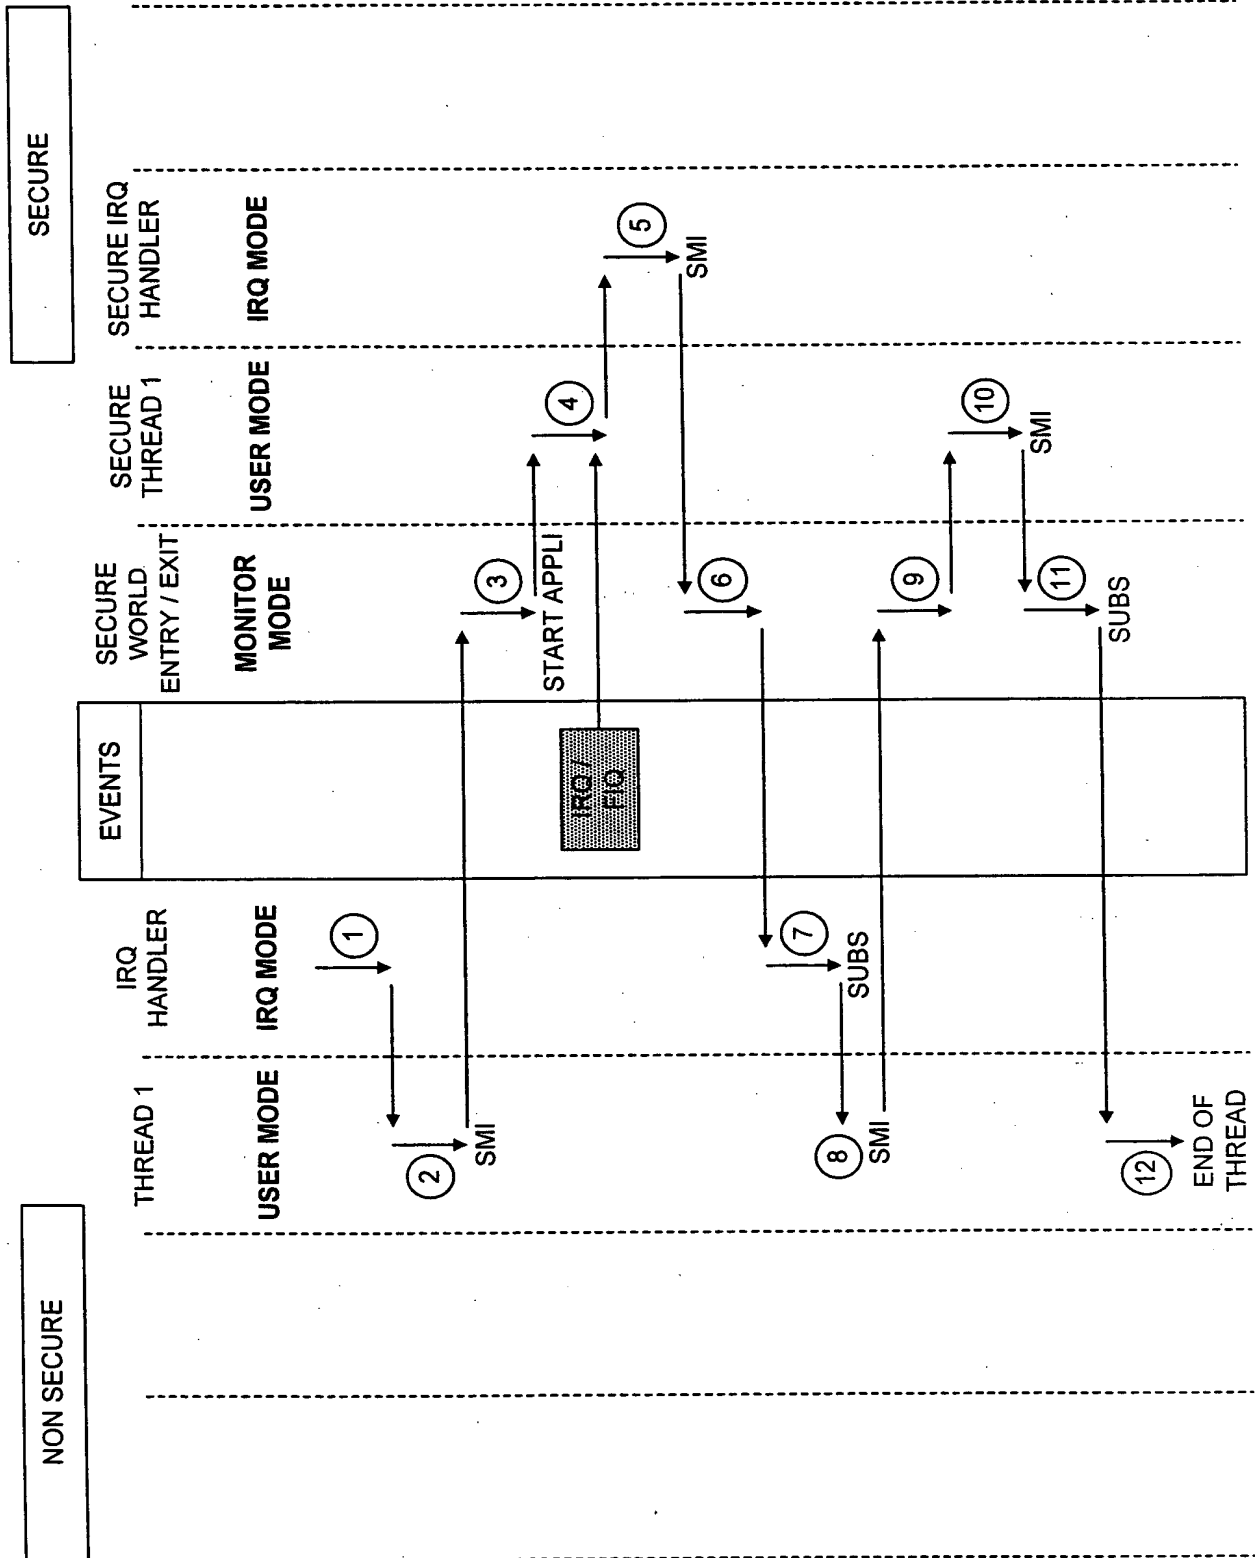


FIG. 13A

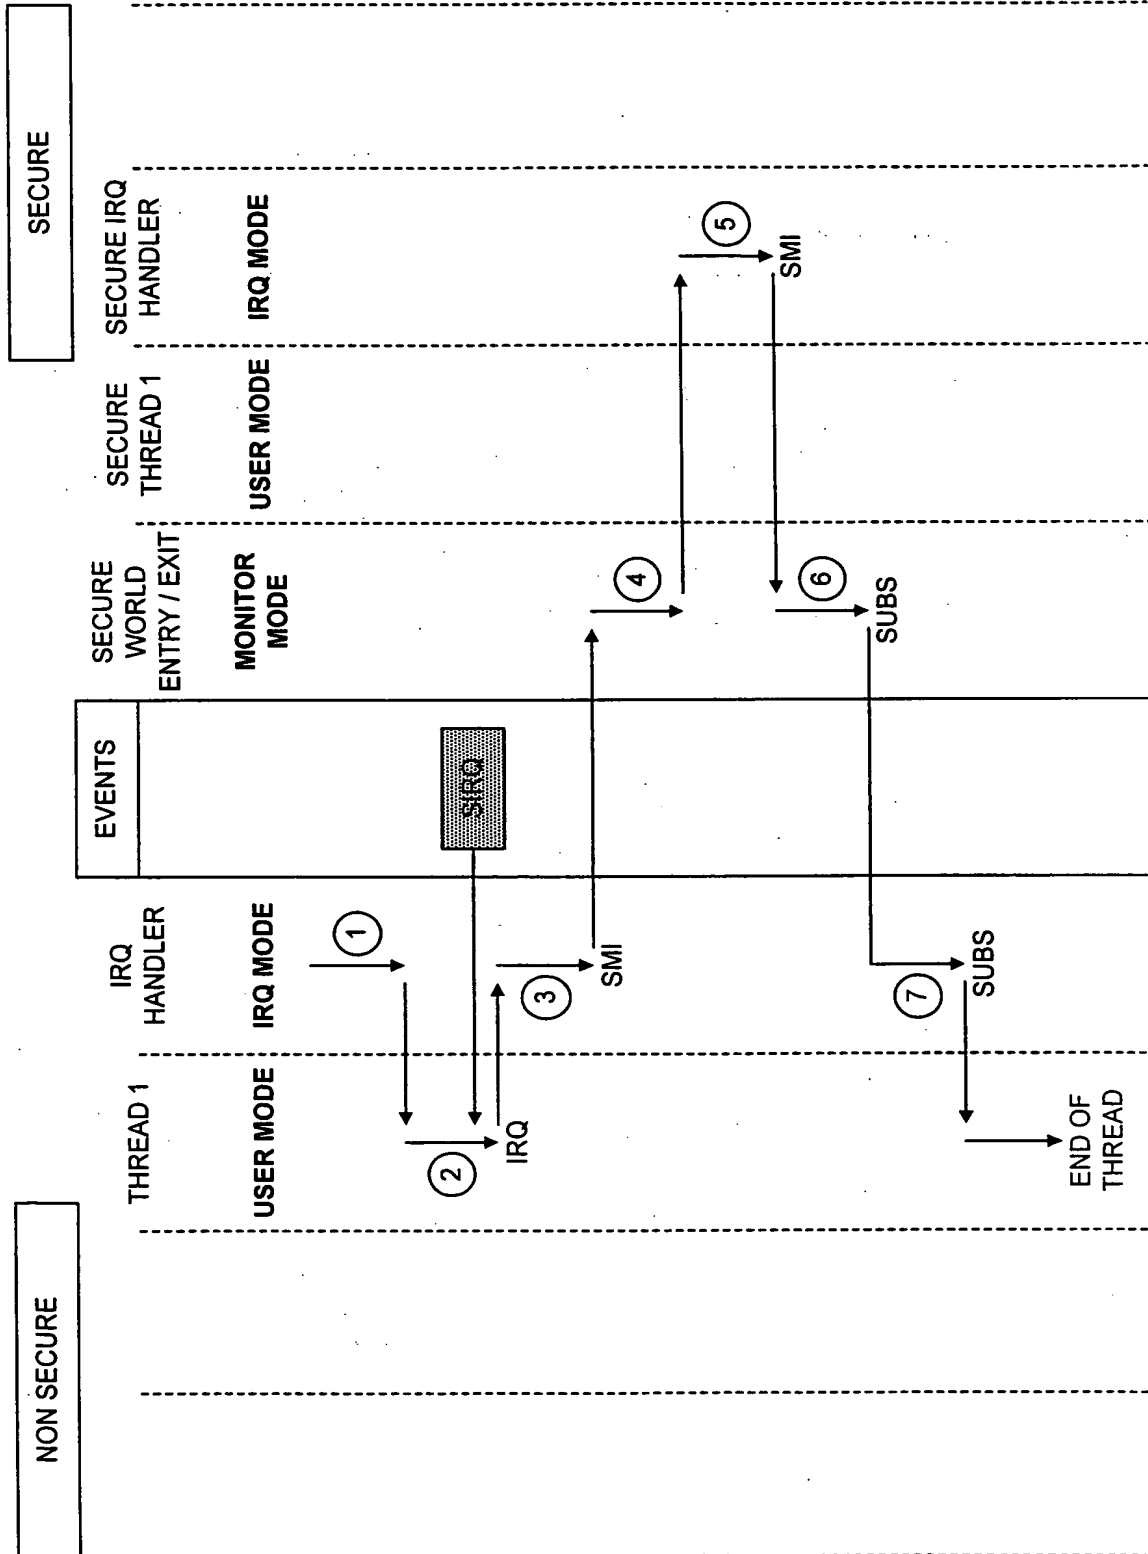


FIG. 13B

11 / 56

EXCEPTION	VECTOR OFFSET	CORRESPONDING MODE
RESET	0x00	SUPERVISOR MODE
UNDEF	0x04	MONITOR MODE / UNDEF MODE
SWI	0x08	SUPERVISOR MODE / MONITOR MODE
PREFETCH ABORT	0x0C	ABORT MODE / MONITOR MODE
DATA ABORT	0x10	ABORT MODE / MONITOR MODE
IRQ / SIRQ	0x18	IRQ MODE / MONITOR MODE
FIQ	0x1C	FIQ MODE / MONITOR MODE
SMI	0x20	UNDEF MODE / MONITOR MODE

FIG. 14

MONITOR		
	RESET	VM0
	UNDEF	VM1
	SWI	VM2
	PREFETCH ABORT	VM3
	DATA ABORT	VM4
	IRQ / SIRQ	VM5
	FIQ	VM6
	SMI	VM7

SECURE		NON-SECURE	
RESET	VS0	RESET	VNS0
UNDEF	VS1	UNDEF	VNS1
SWI	VS2	SWI	VNS2
PREFETCH ABORT	VS3	PREFETCH ABORT	VNS3
DATA ABORT	VS4	DATA ABORT	VNS4
IRQ / SIRQ	VS5	IRQ / SIRQ	VNS5
FIQ	VS6	FIQ	VNS6
SMI	VS7	SMI	VNS7

FIG. 15

12 / 56

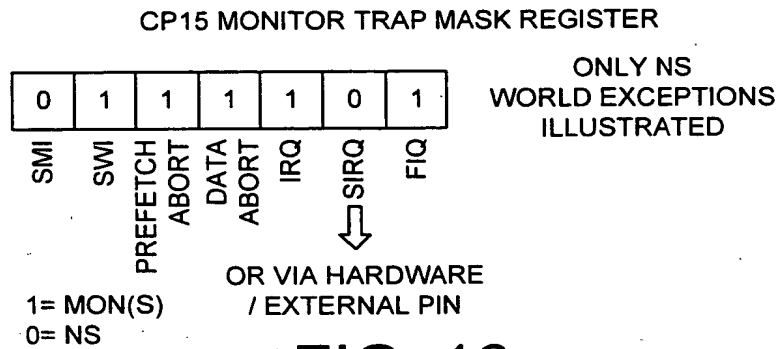


FIG. 16

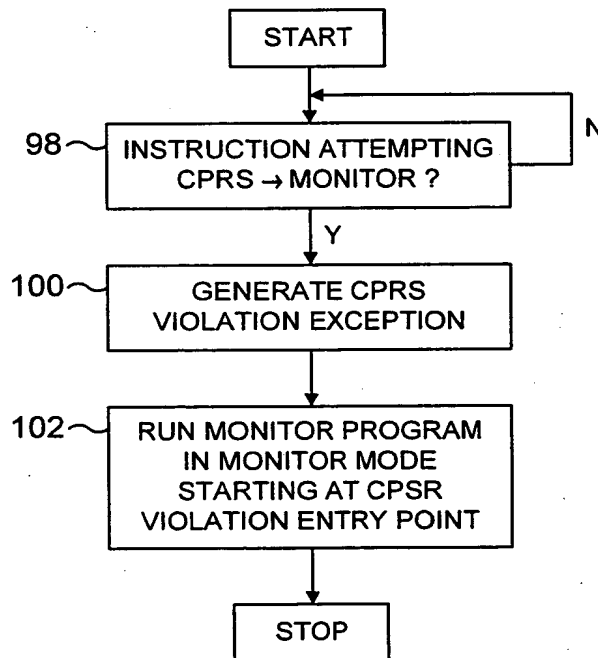


FIG. 17

13 / 56

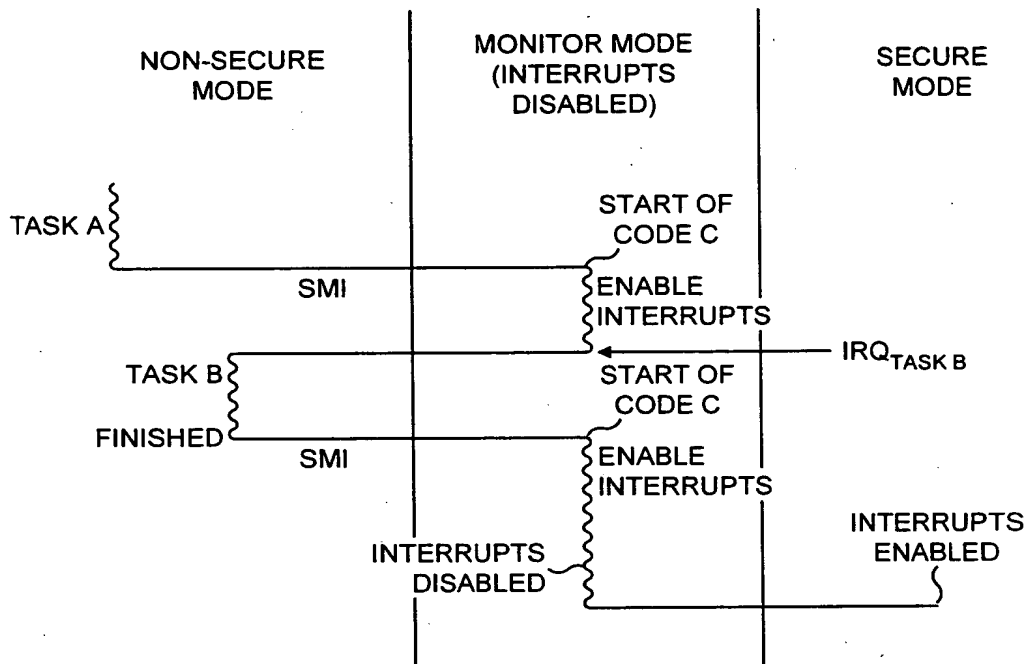


FIG. 18

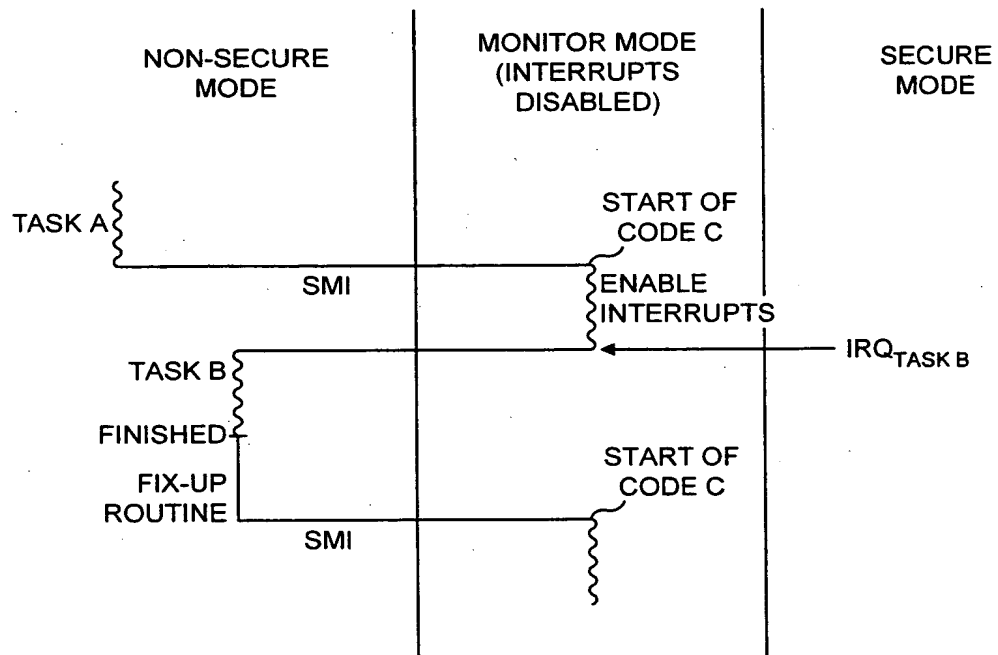


FIG. 19

14 / 56

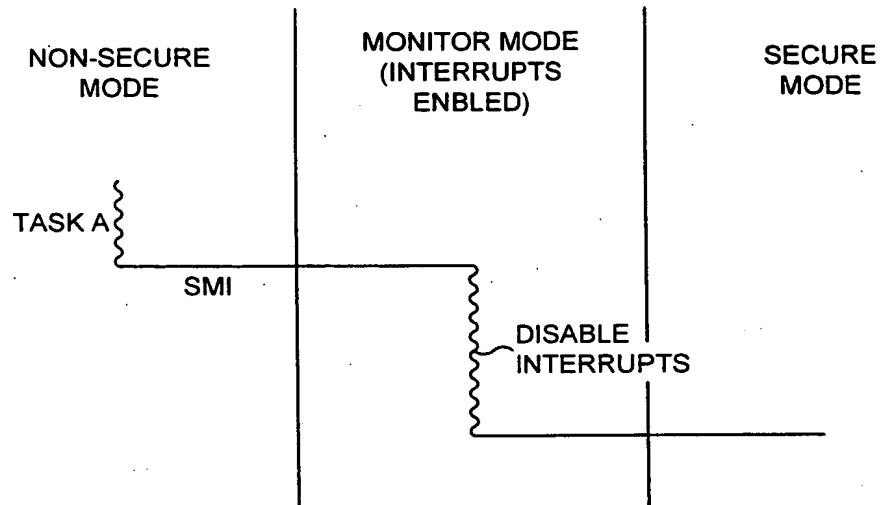


FIG. 20

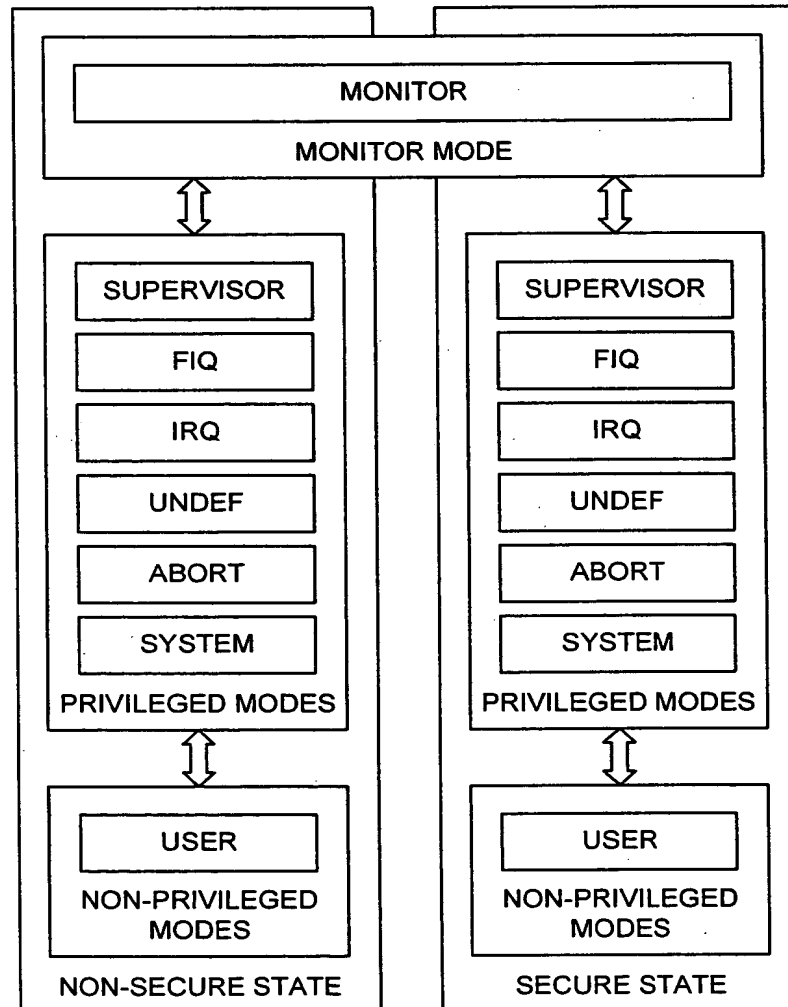


FIG. 21

15 / 56

USER	SYSTEM	SUPERVISOR	ABORT	UNDEFINED	INTERRUPT	FAST INTERRUPT	MONITOR
R0	R0	R0	R0	R0	R0	R0	R0
R1	R1	R1	R1	R1	R1	R1	R1
R2	R2	R2	R2	R2	R2	R2	R2
R3	R3	R3	R3	R3	R3	R3	R3
R4	R4	R4	R4	R4	R4	R4	R4
R5	R5	R5	R5	R5	R5	R5	R5
R6	R6	R6	R6	R6	R6	R6	R6
R7	R7	R7	R7	R7	R7	R7	R7
R8	R8	R8	R8	R8	R8	R8_FIQ	R8
R9	R9	R9	R9	R9	R9	R9_FIQ	R9
R10	R10	R10	R10	R10	R10	R10_FIQ	R10
R11	R11	R11	R11	R11	R11	R11_FIQ	R11
R12	R12	R12	R12	R12	R12	R12_FIQ	R12
R13	R13	R13_SVC	R13_ABT	R13_UND	R13_IRQ	R13_FIQ	R13_MON
R14	R14	R14_SVC	R14_ABT	R14_UND	R14_IRQ	R14_FIQ	R14_MON
PC	PC	PC	PC	PC	PC	PC	PC
CPSR	CPSR	CPSR	CPSR	CPSR	CPSR	CPSR	CPSR
		SPSR_SVC	SPSR_ABT	SPSR_UND	SPSR_IRQ	SPSR_FIQ	SPSR_MON

FIG. 22

16 / 56

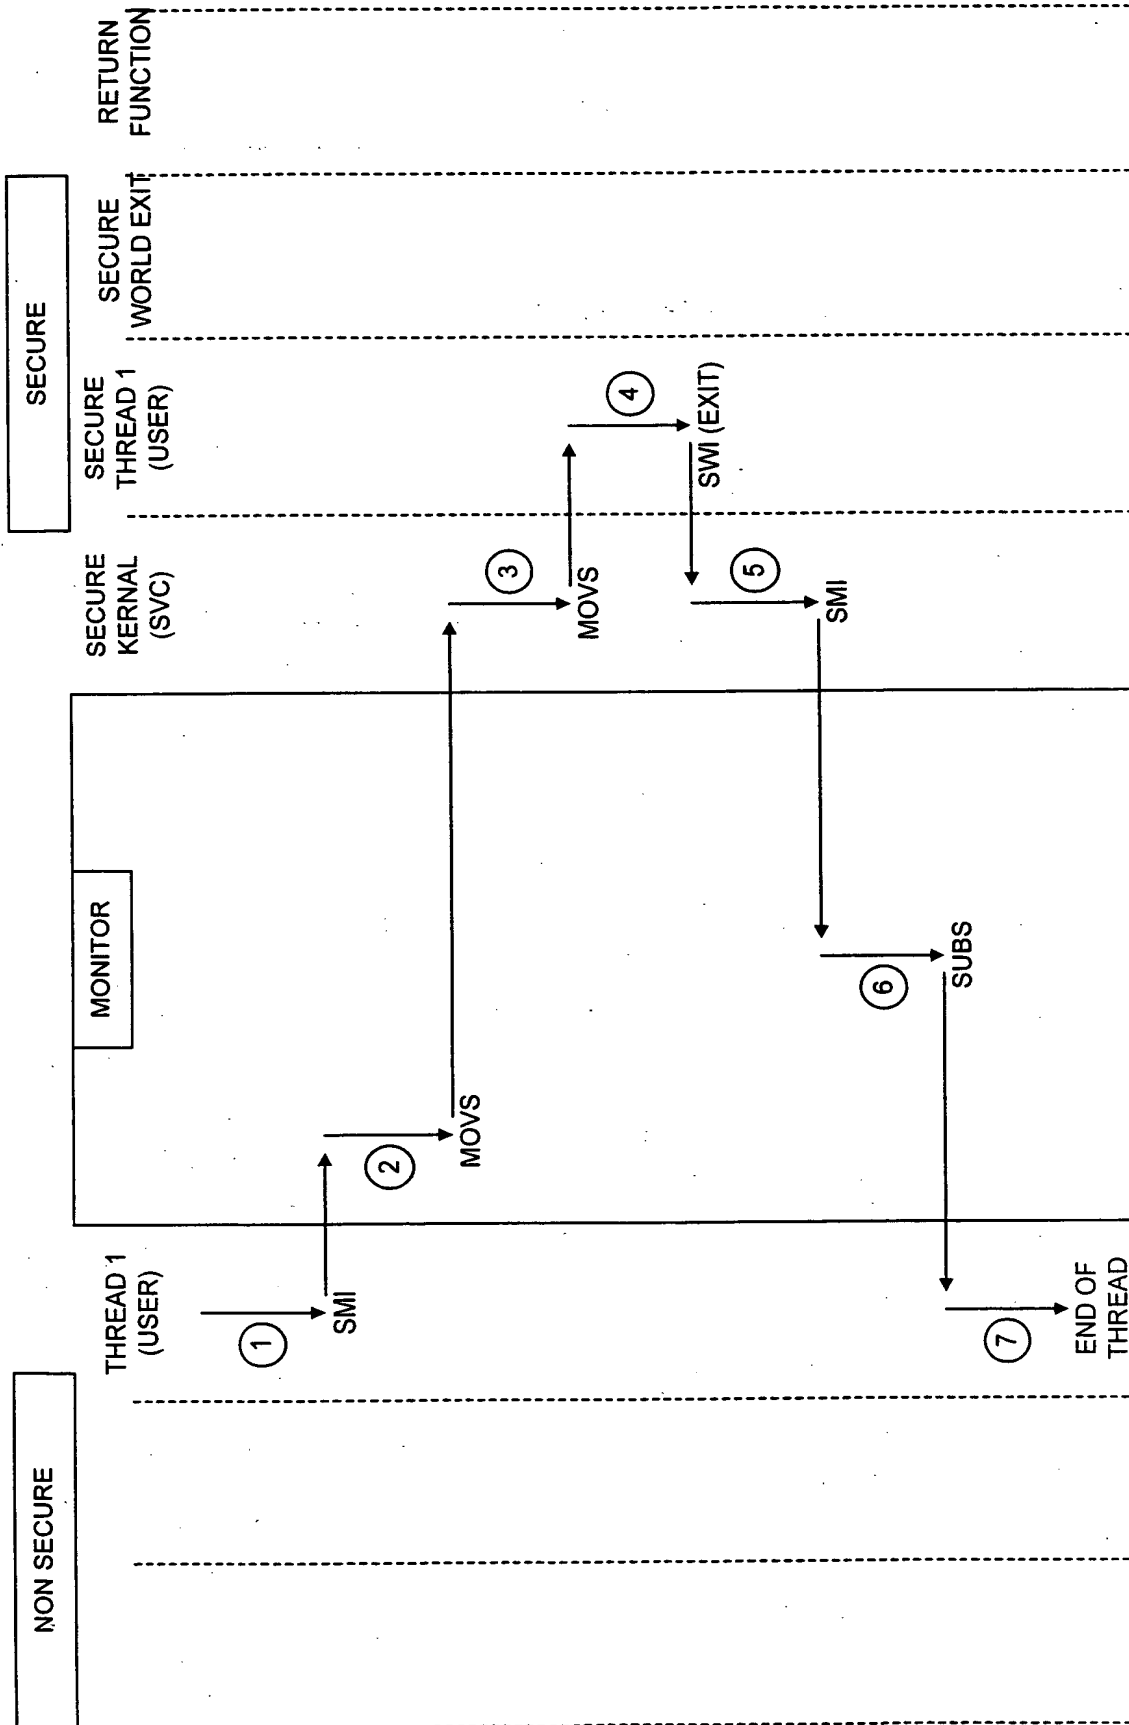


FIG. 23

17 / 56

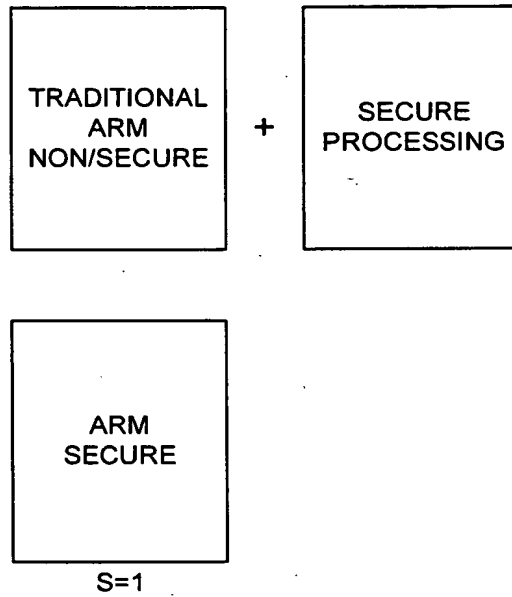


FIG. 24

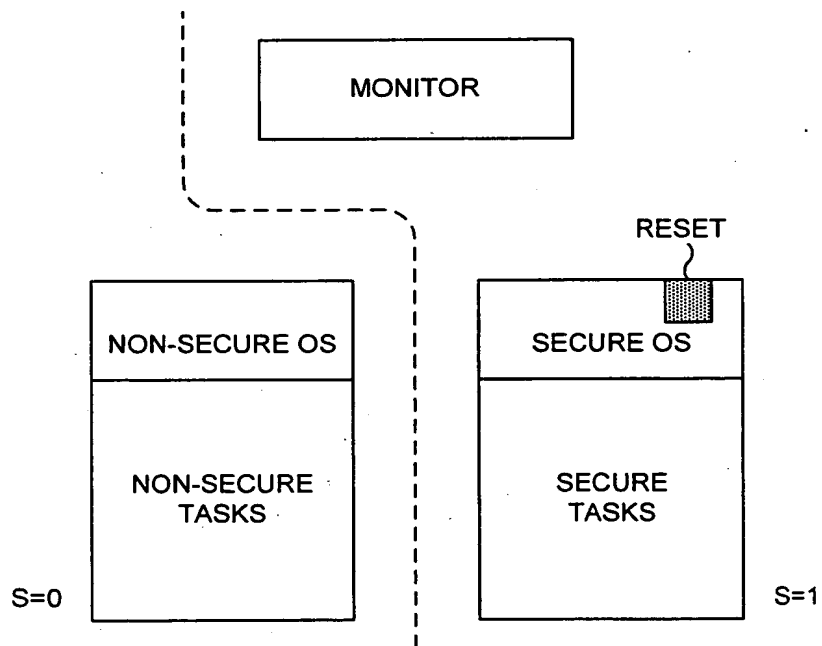


FIG. 25

18 / 56

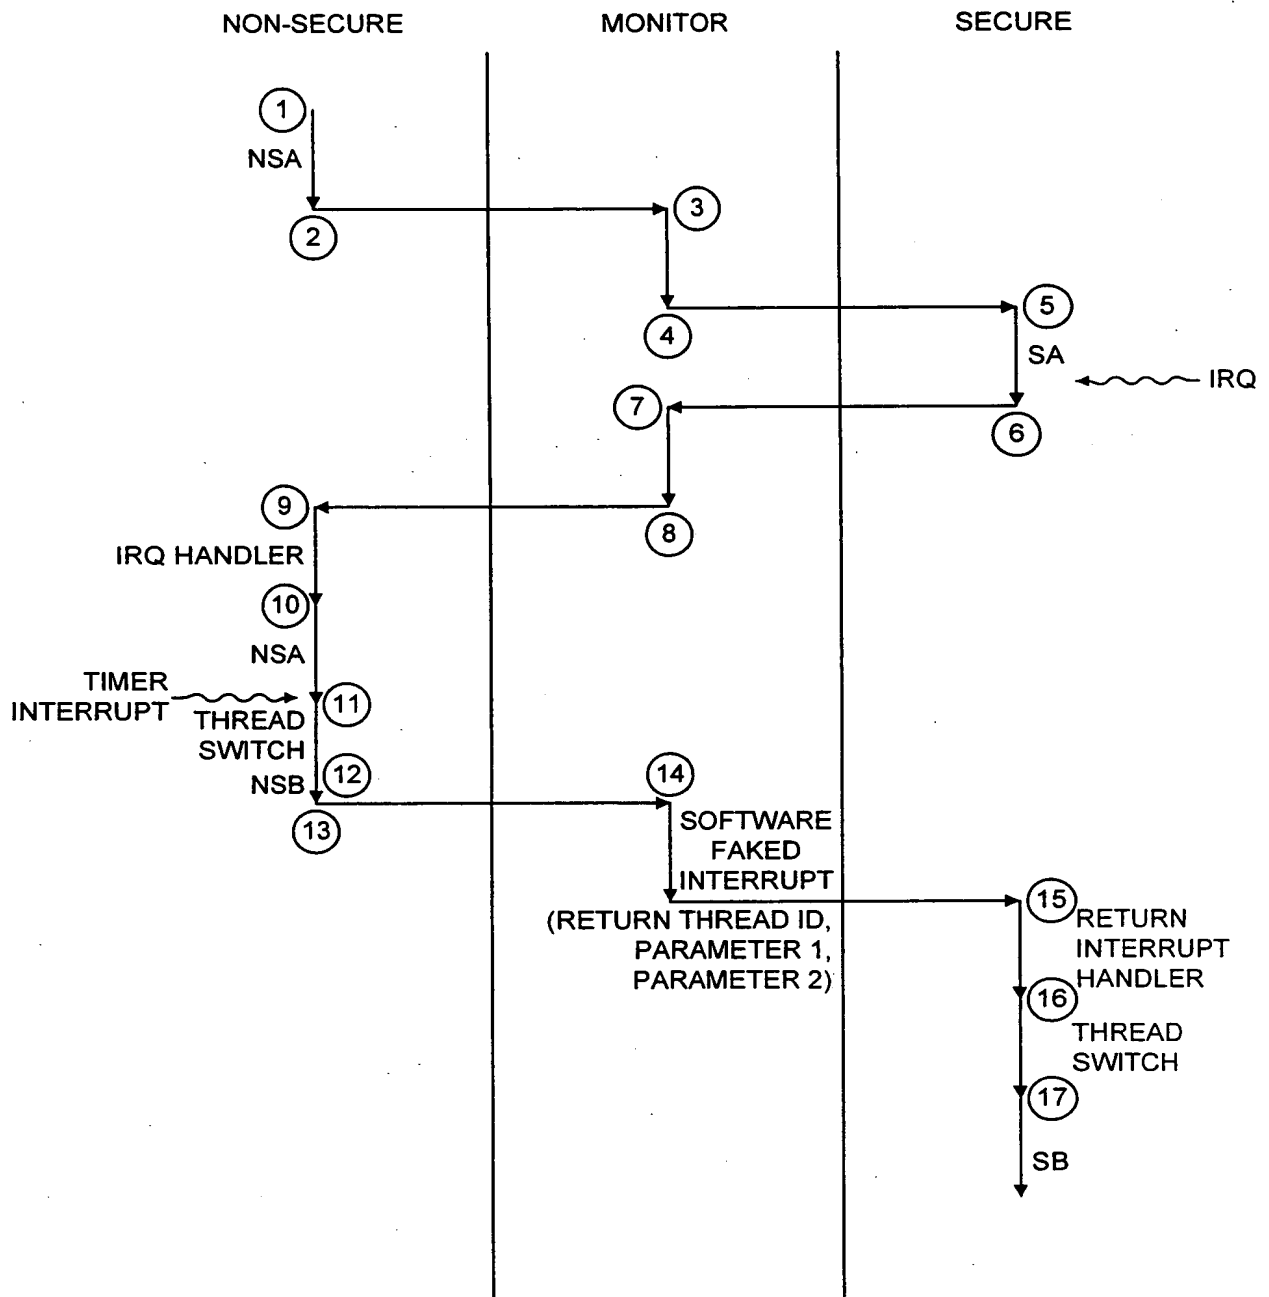


FIG. 26

19 / 56

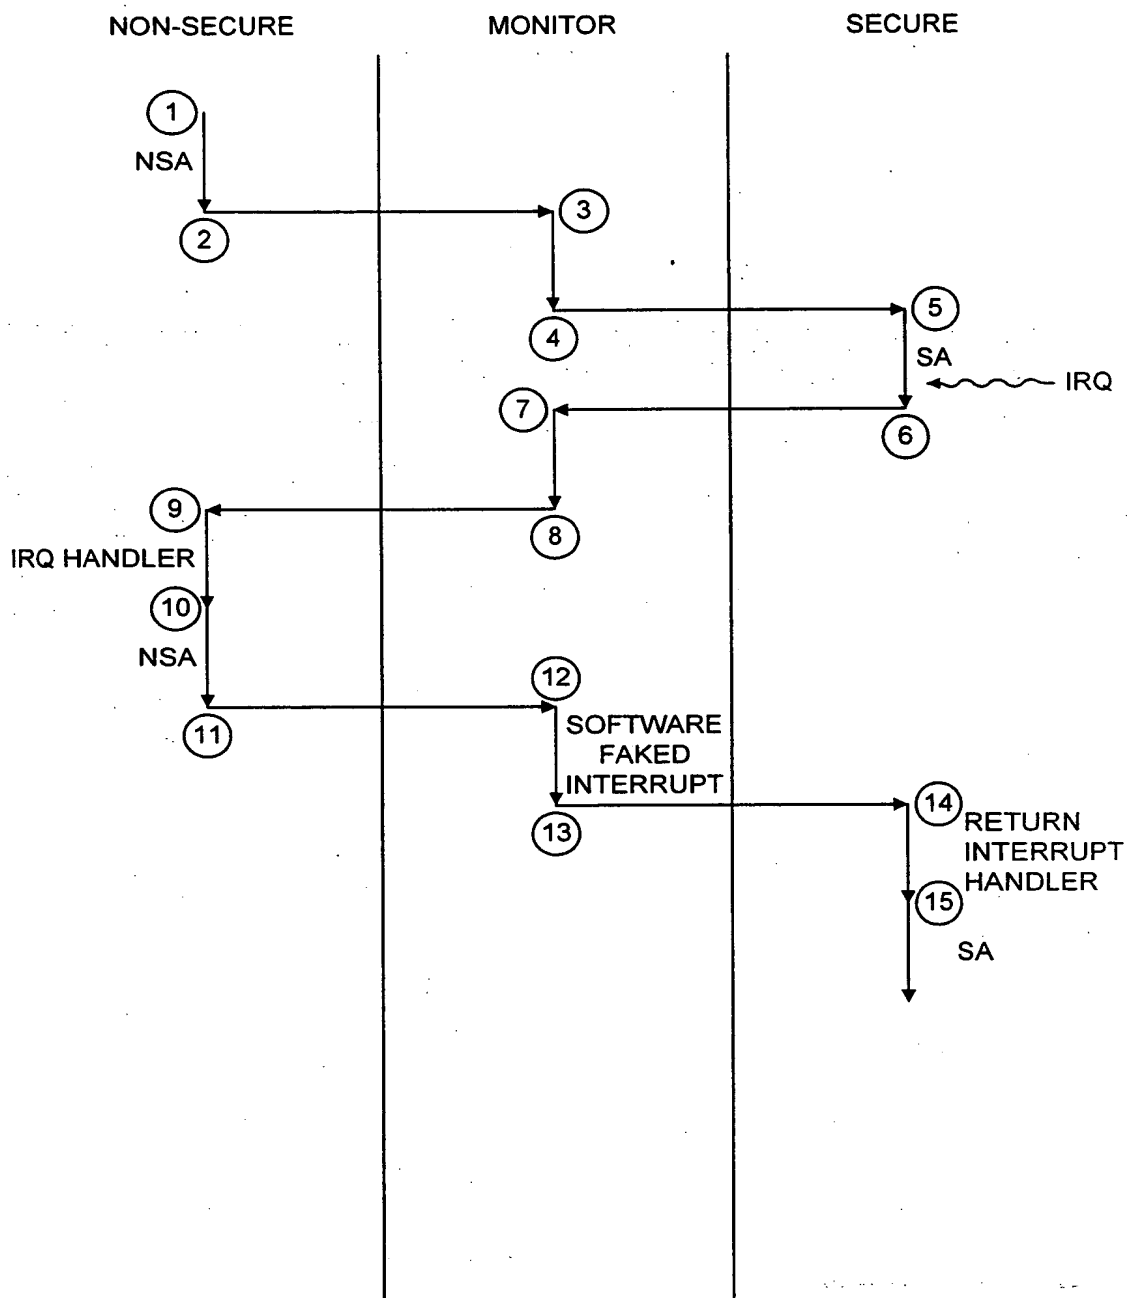


FIG. 27

20 / 56

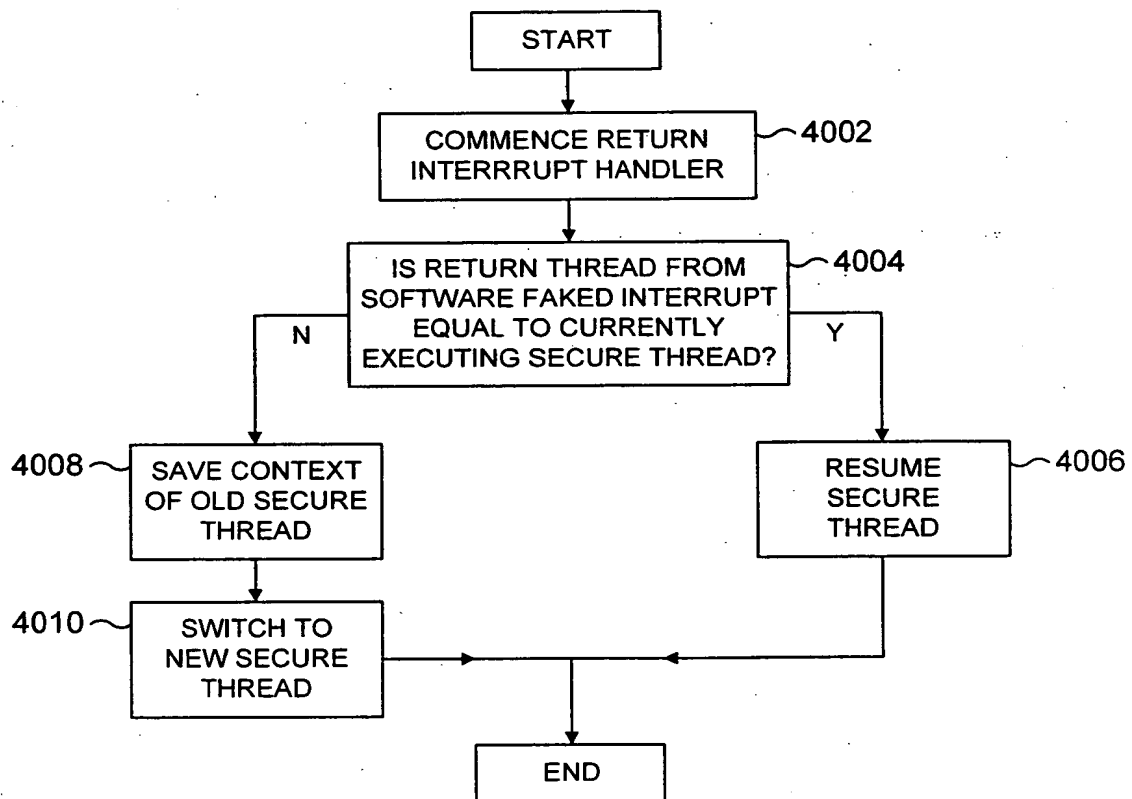


FIG. 28

21 / 56

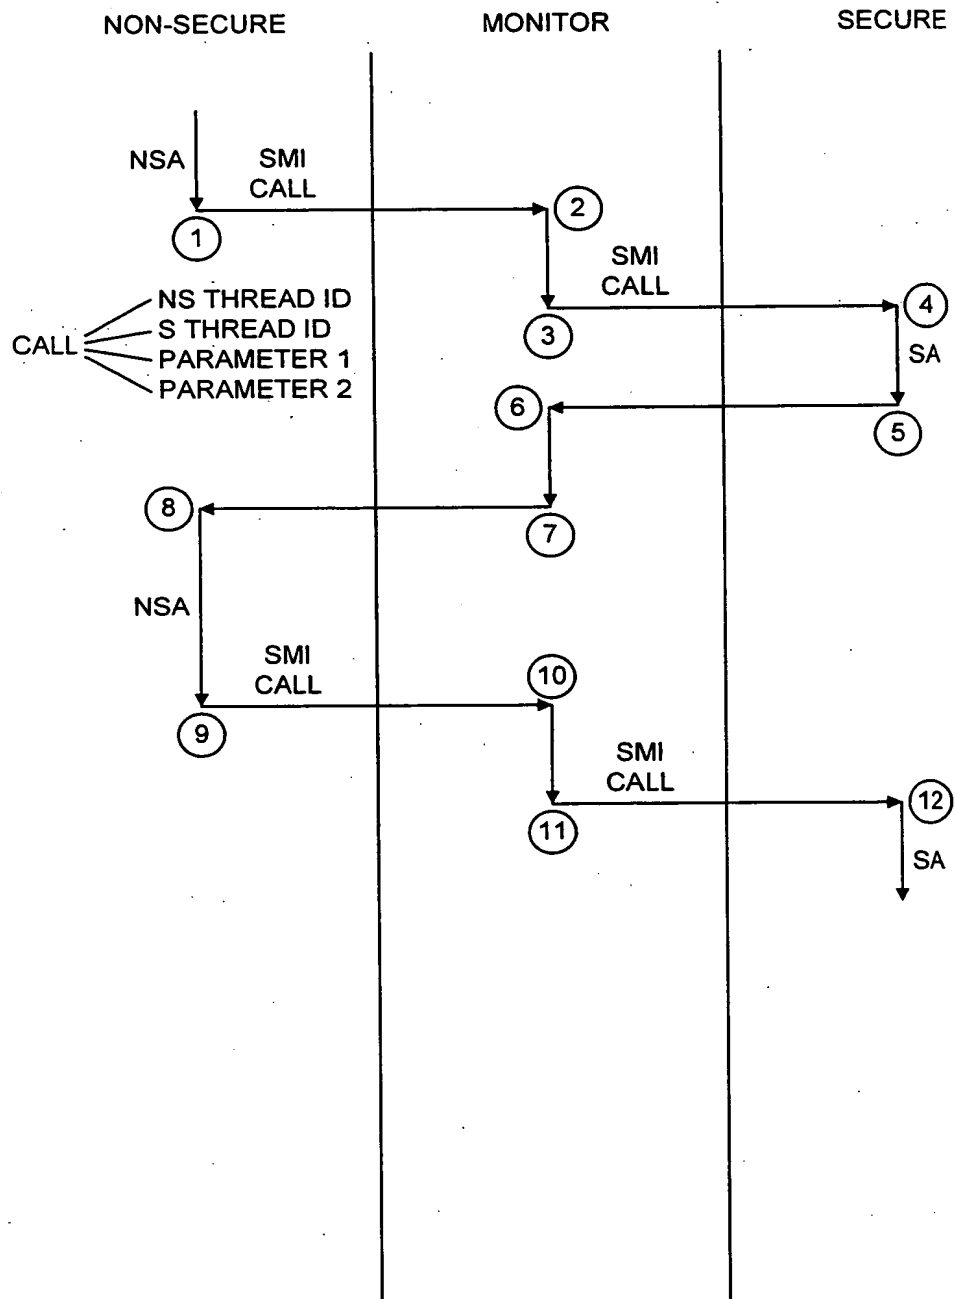


FIG. 29

22 / 56

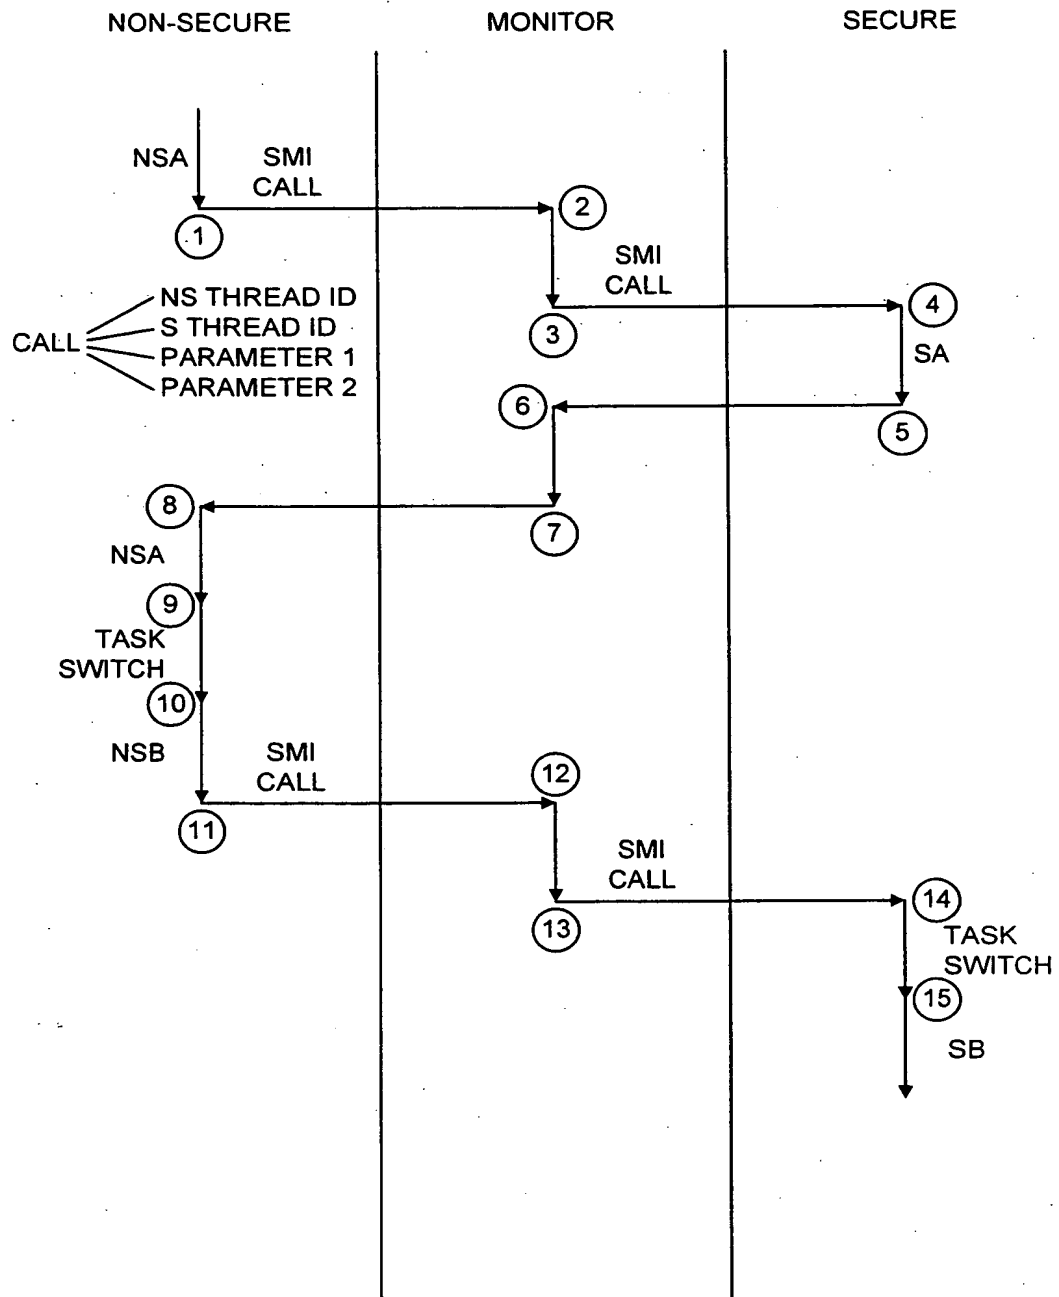


FIG. 30

23 / 56

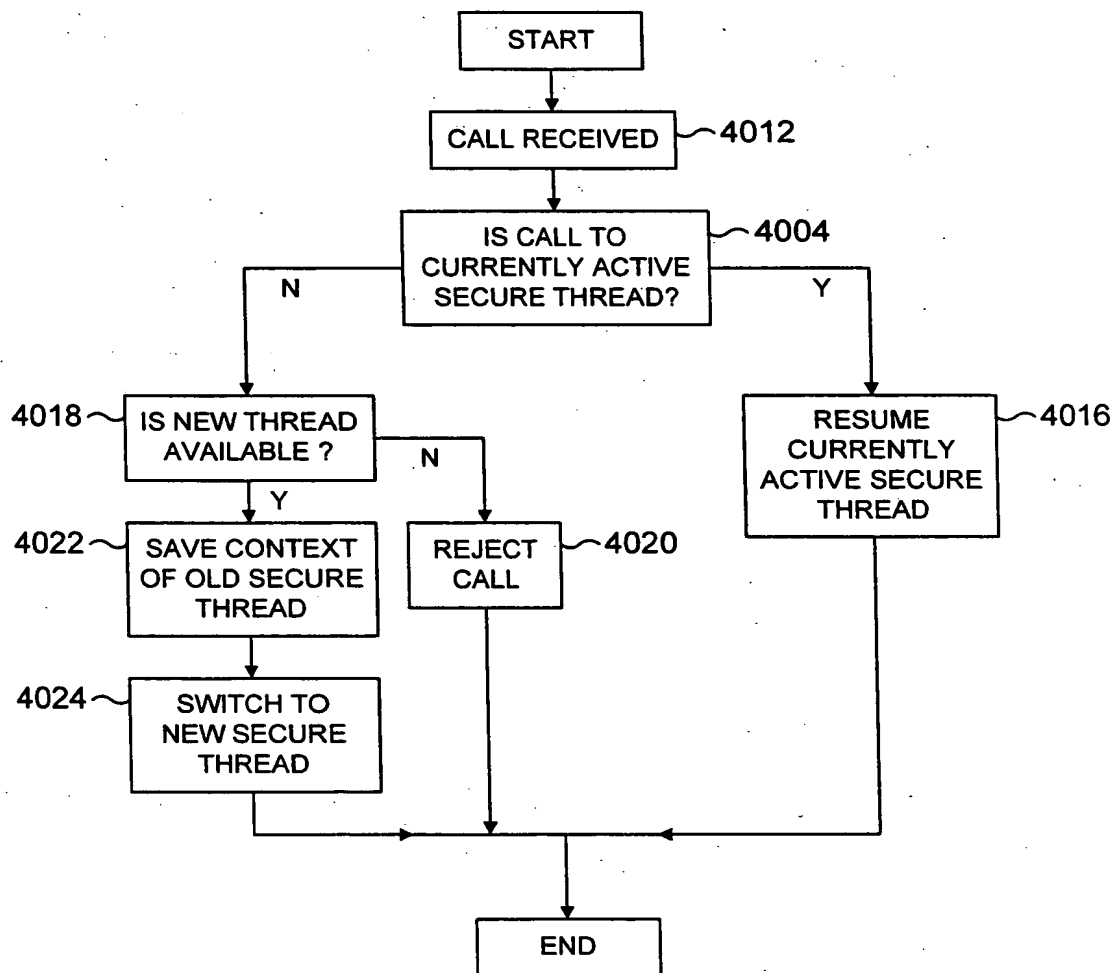


FIG. 31

24 / 56

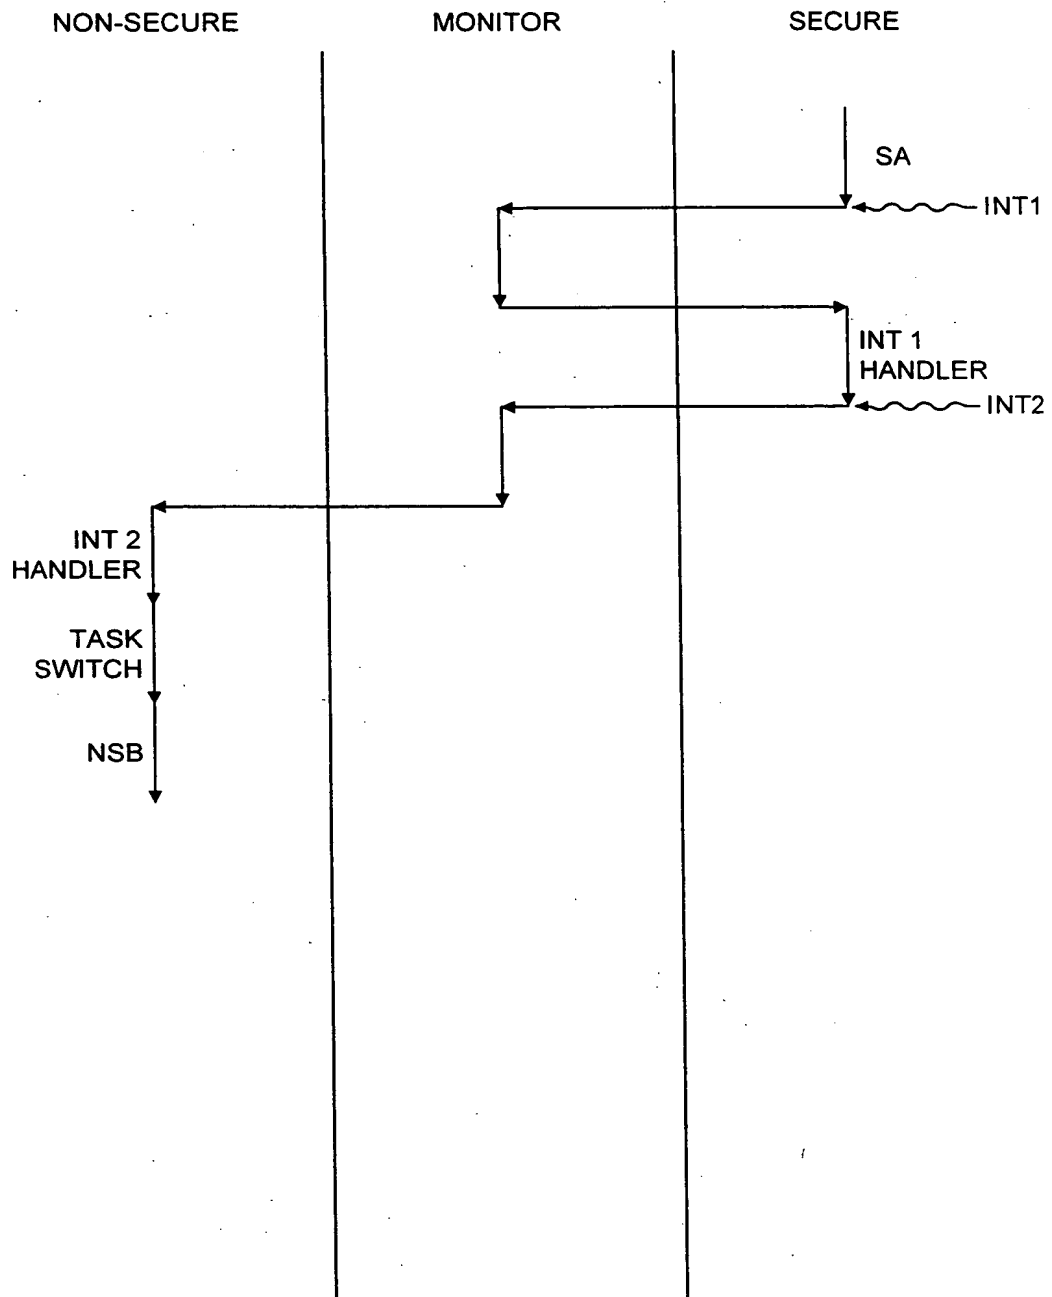


FIG. 32

25 / 56

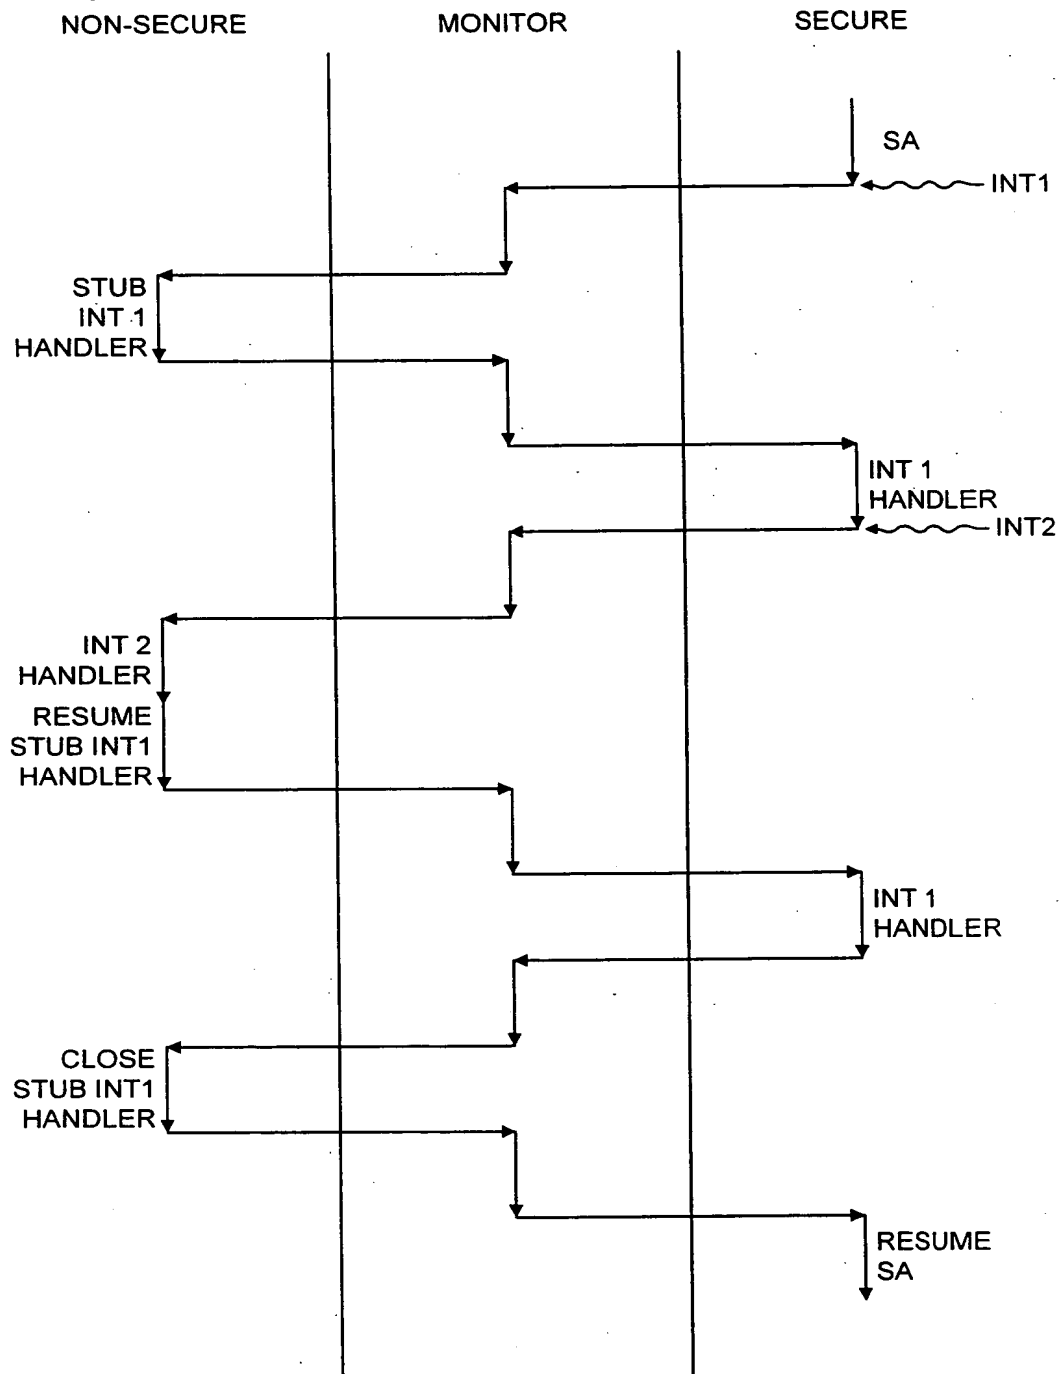


FIG. 33

26 / 56

INTERRUPT TYPE/PRIORITY	HOW HANDLED
1	S
2	S
3	NS
4	NS/S
5	NS
6	NS/S
7	NS
⋮	⋮
⋮	⋮
⋮	⋮

NO S ONLY
HANDLERS
LOWER THAN
HIGHEST NS
HANDLER

FIG. 34

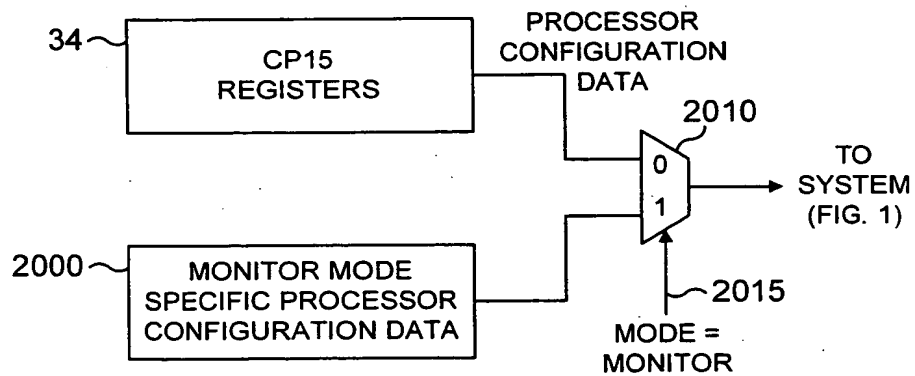


FIG. 35

27 / 56

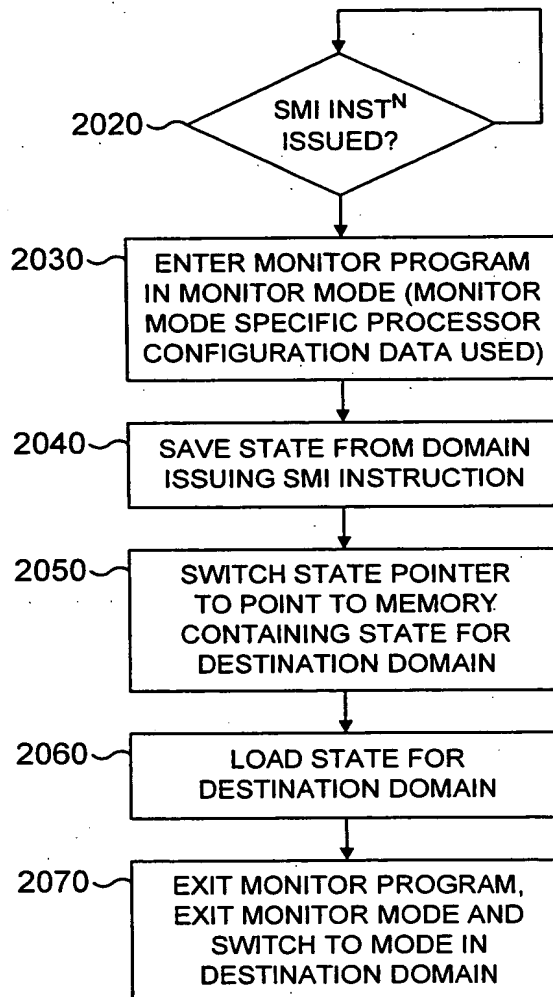


FIG. 36

28 / 56


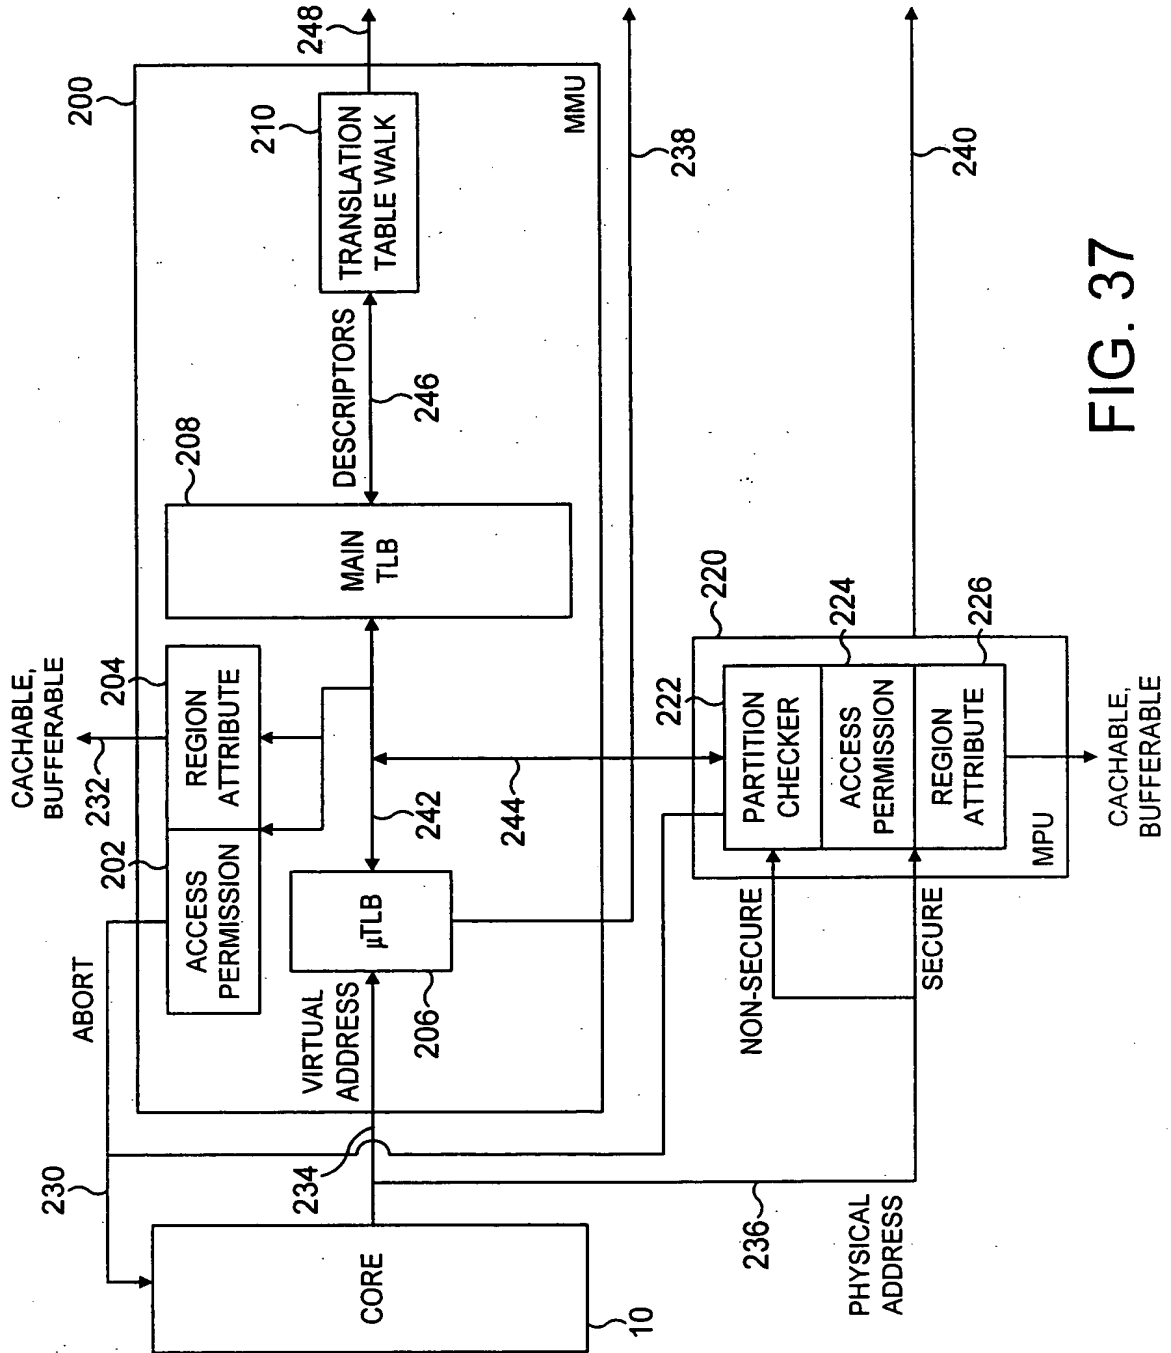


FIG. 37

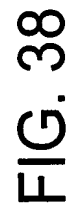

30 / 56

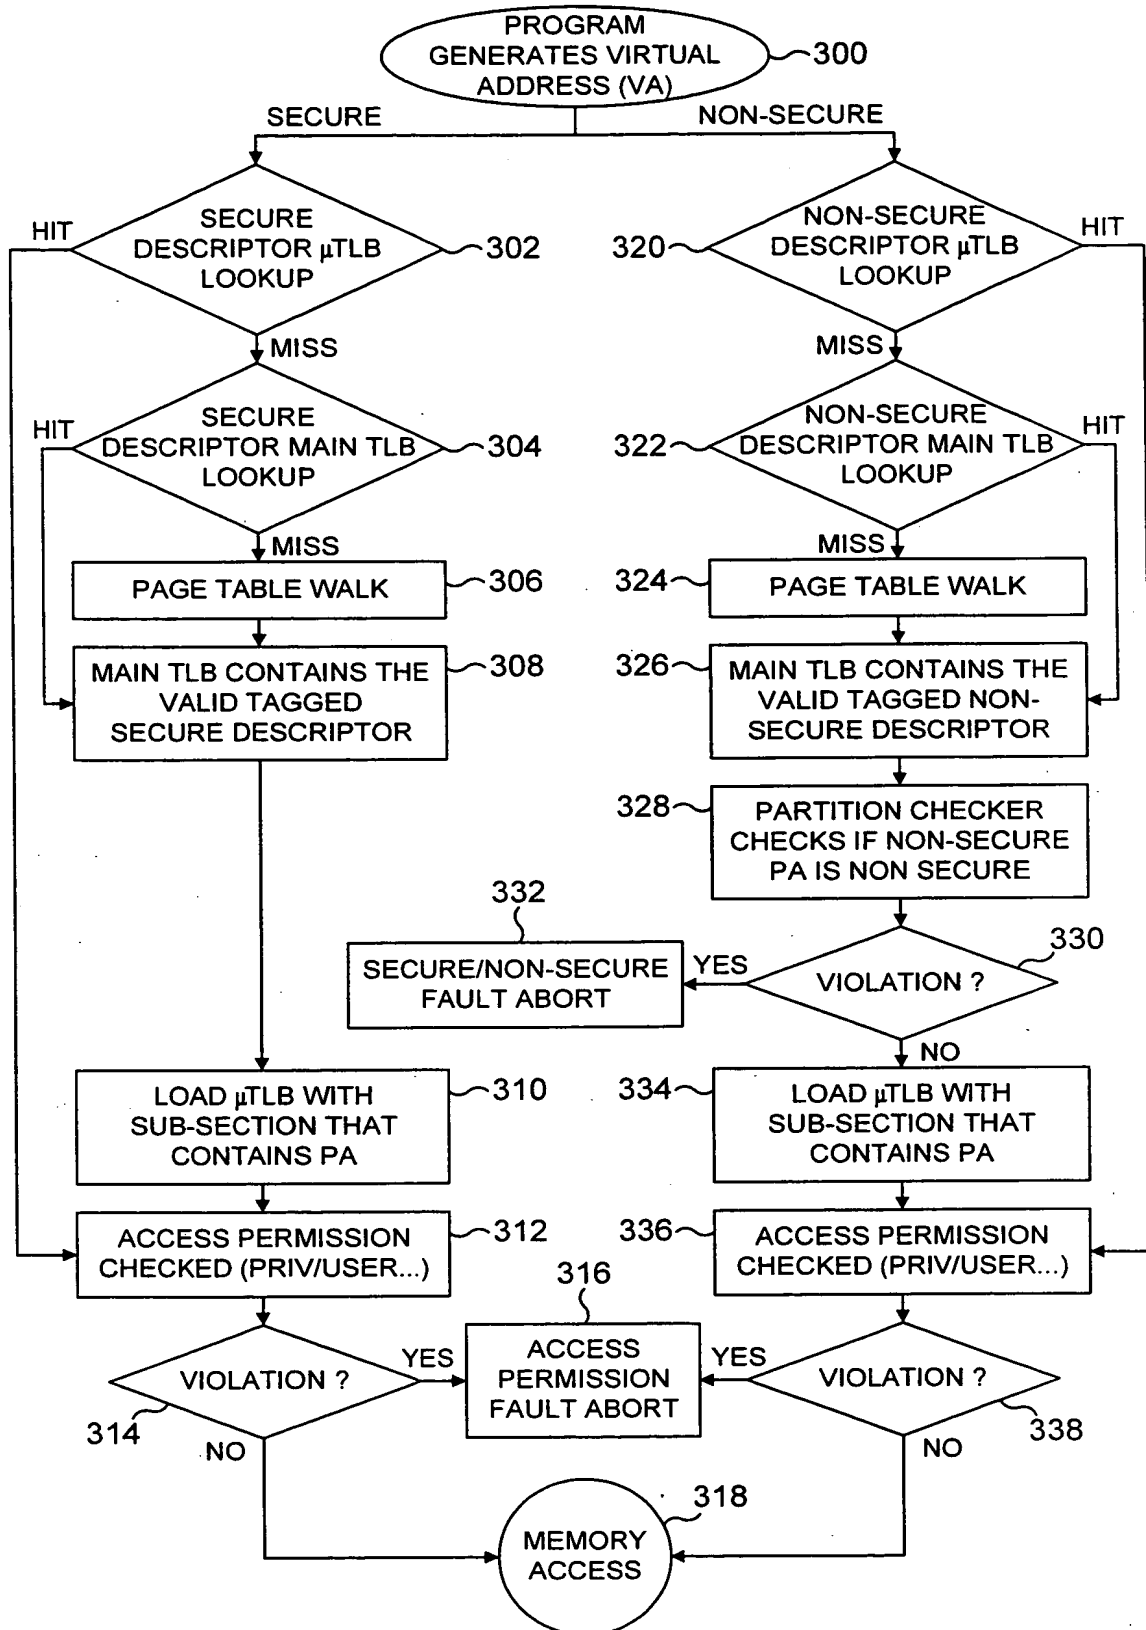


FIG. 39

31 / 56

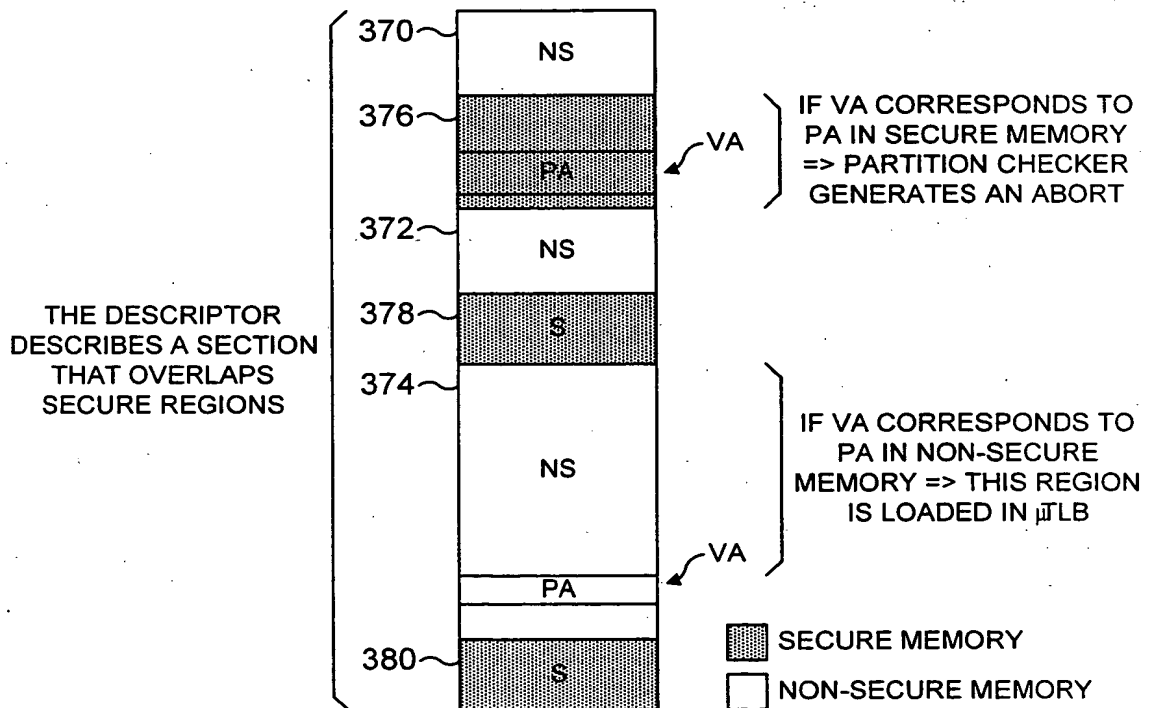
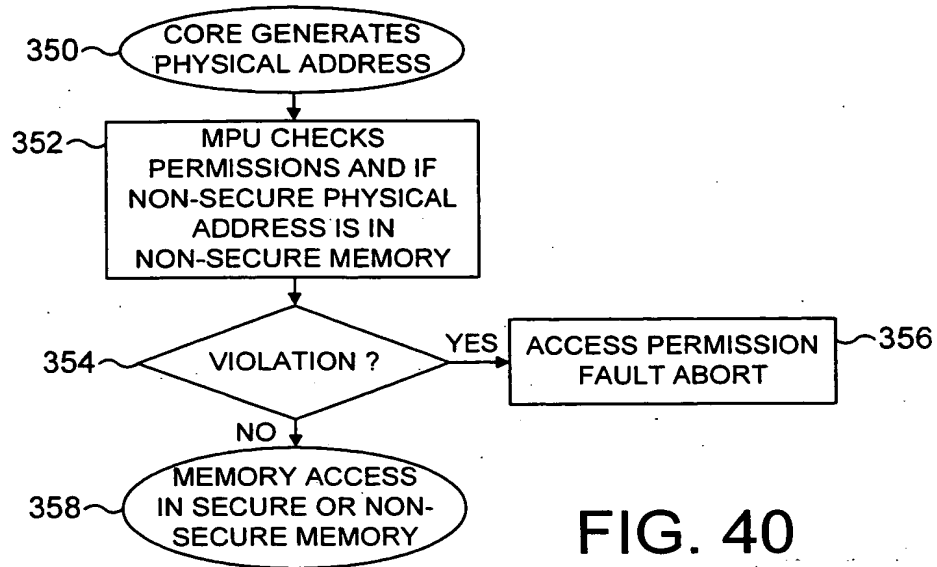


FIG. 41

32 / 56

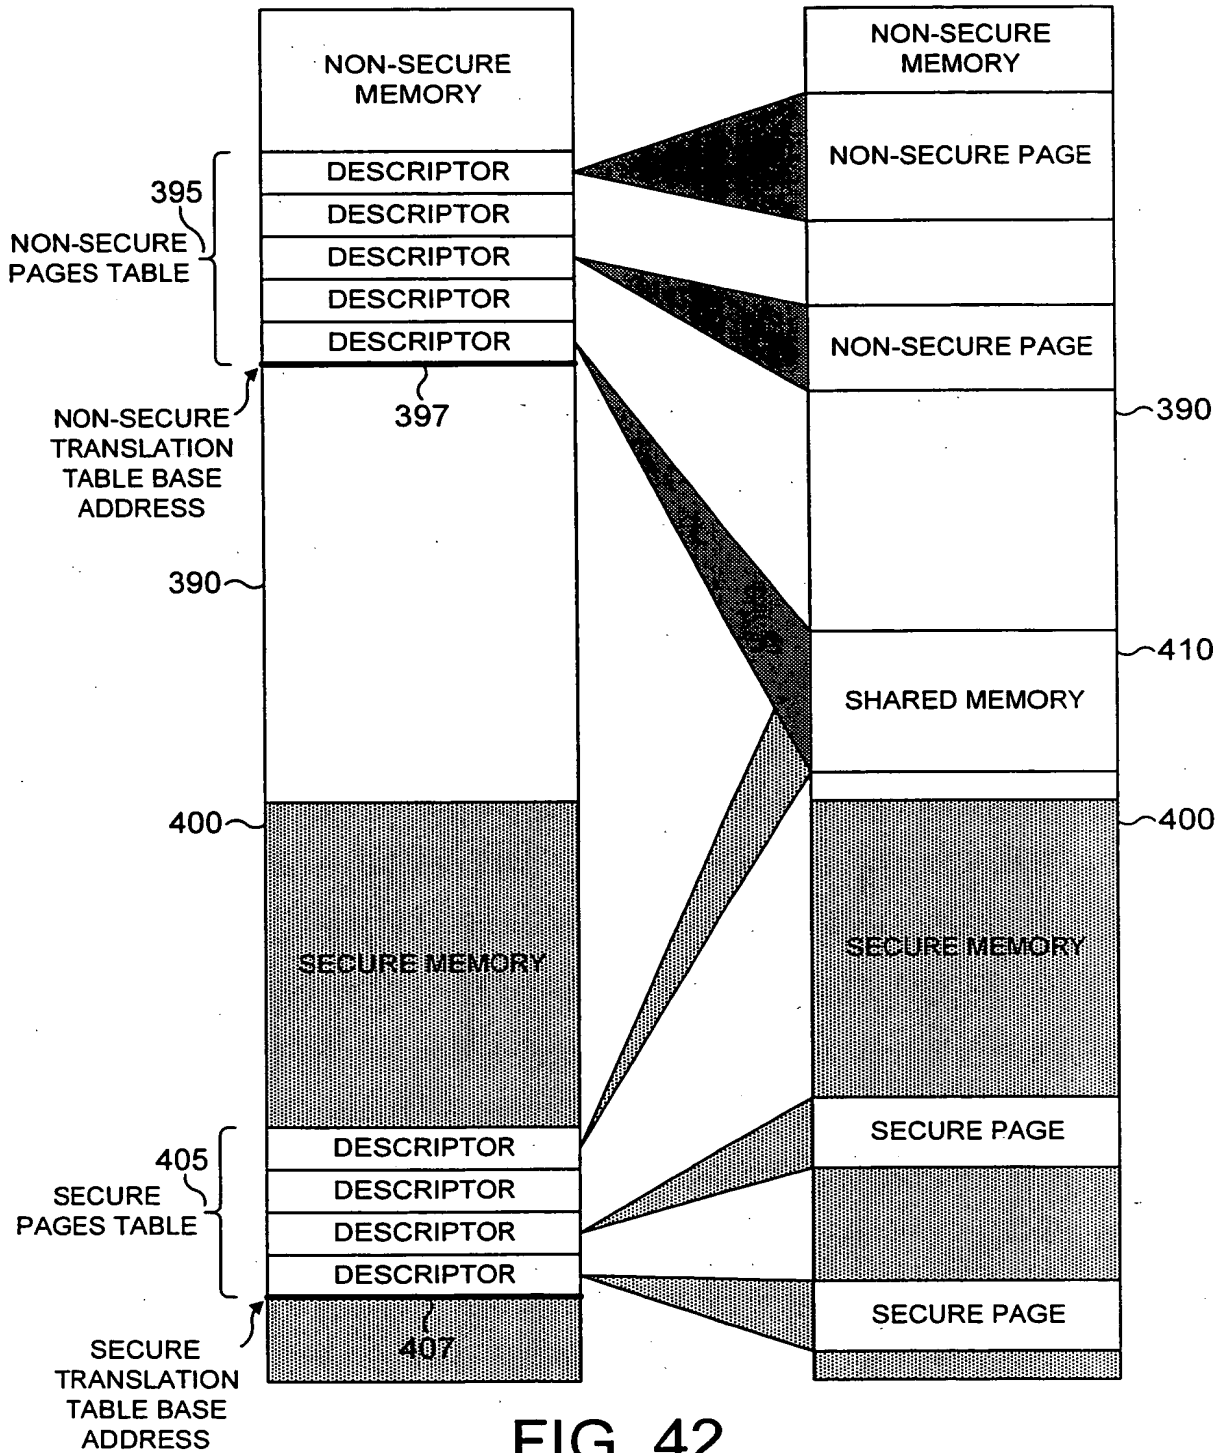


FIG. 42

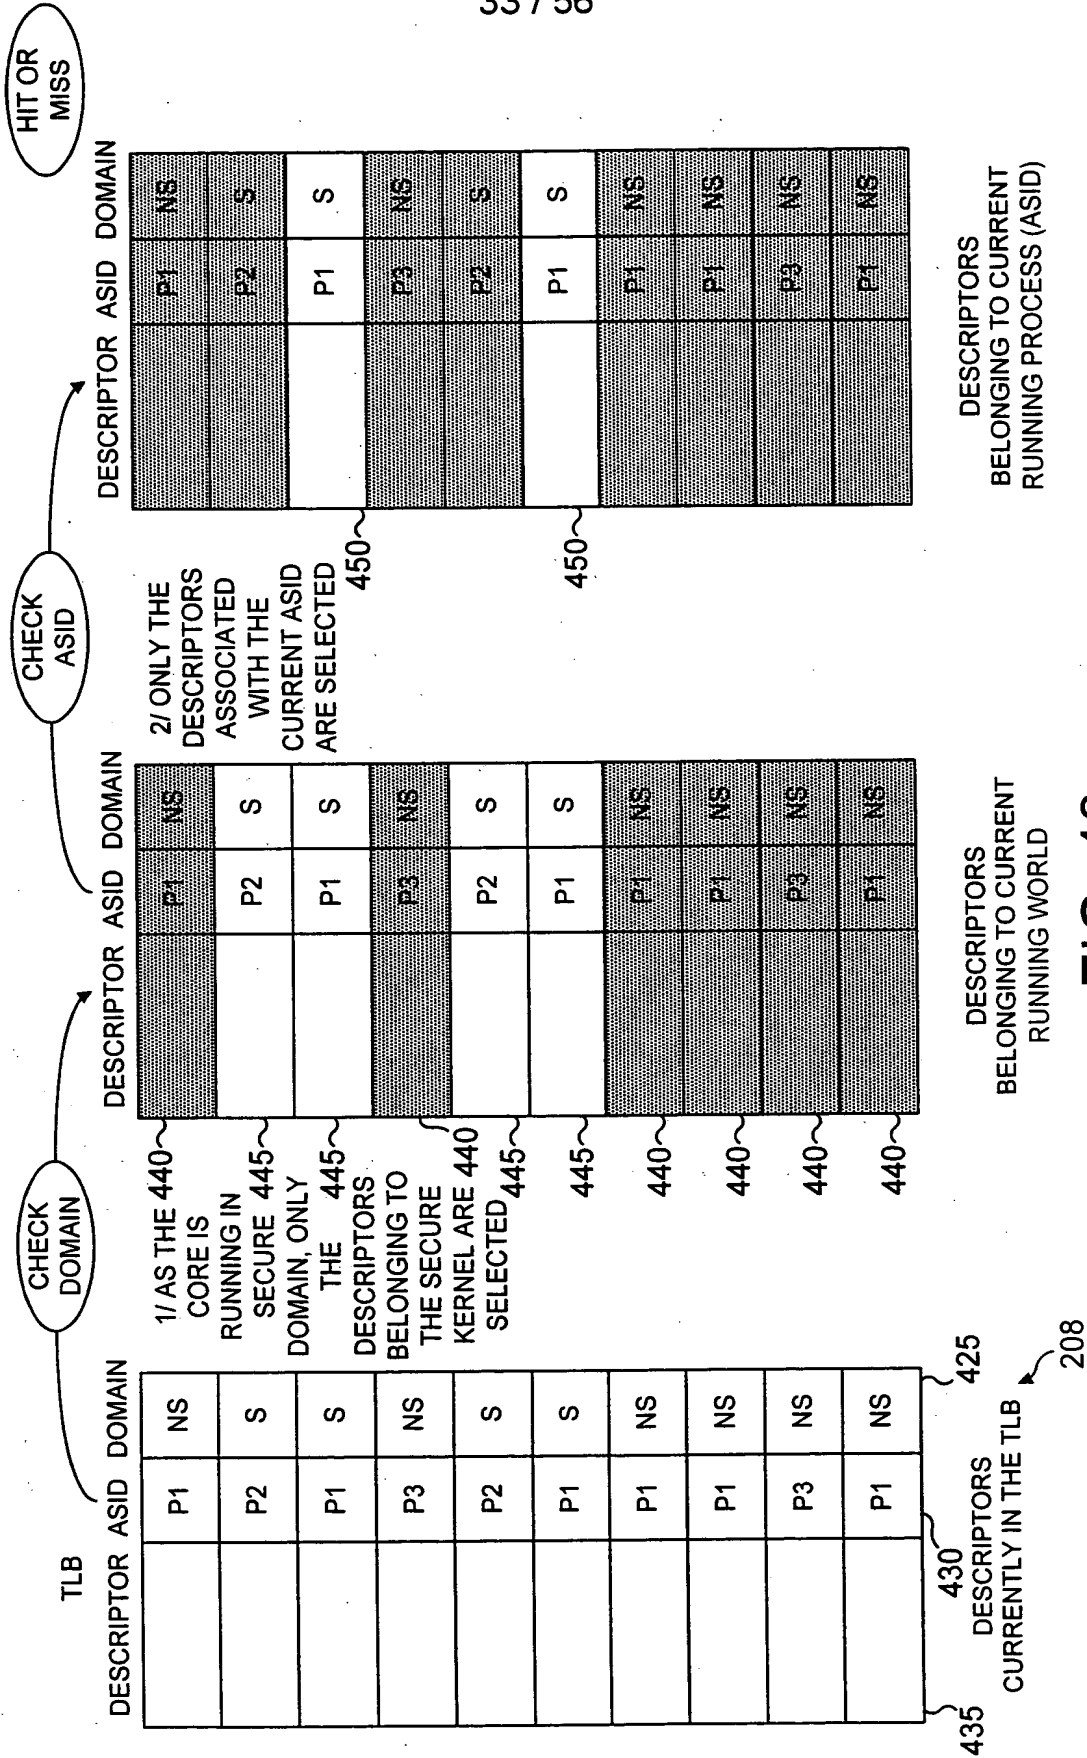


FIG. 43

34 / 56

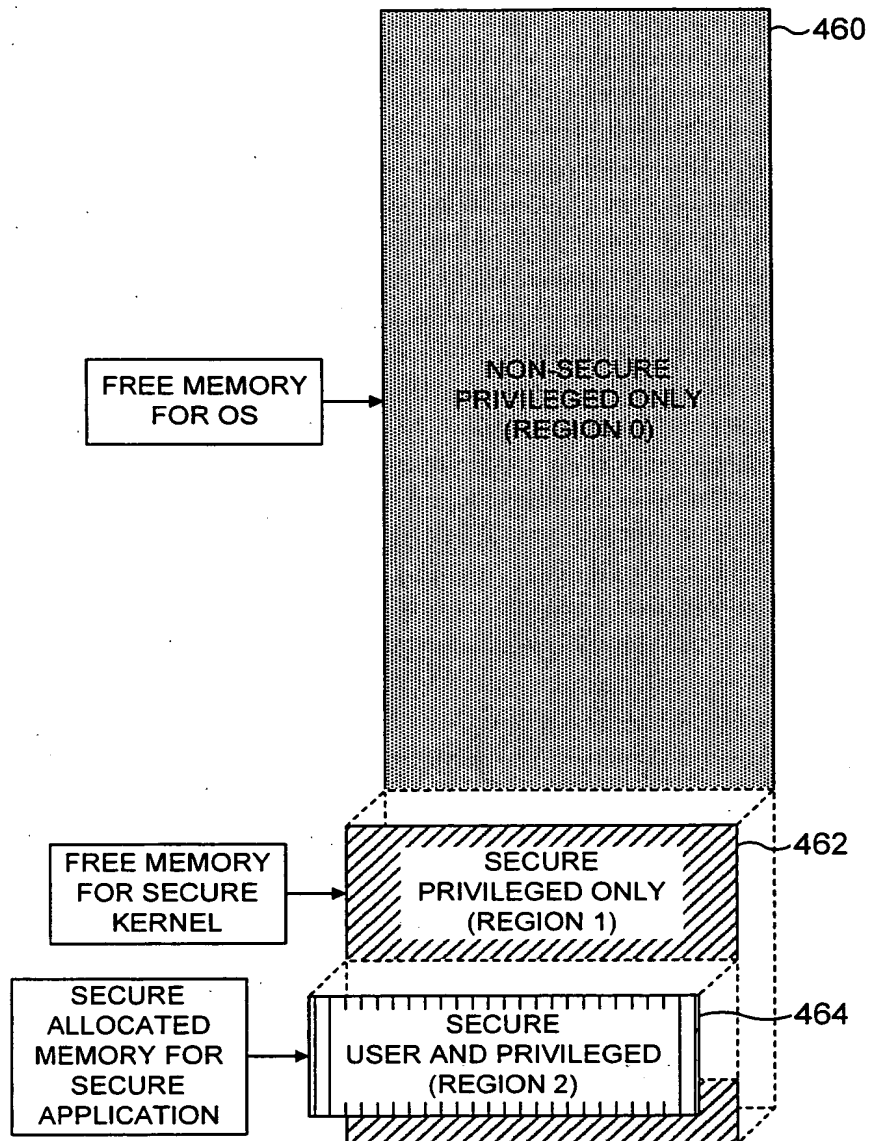


FIG. 44

35 / 56

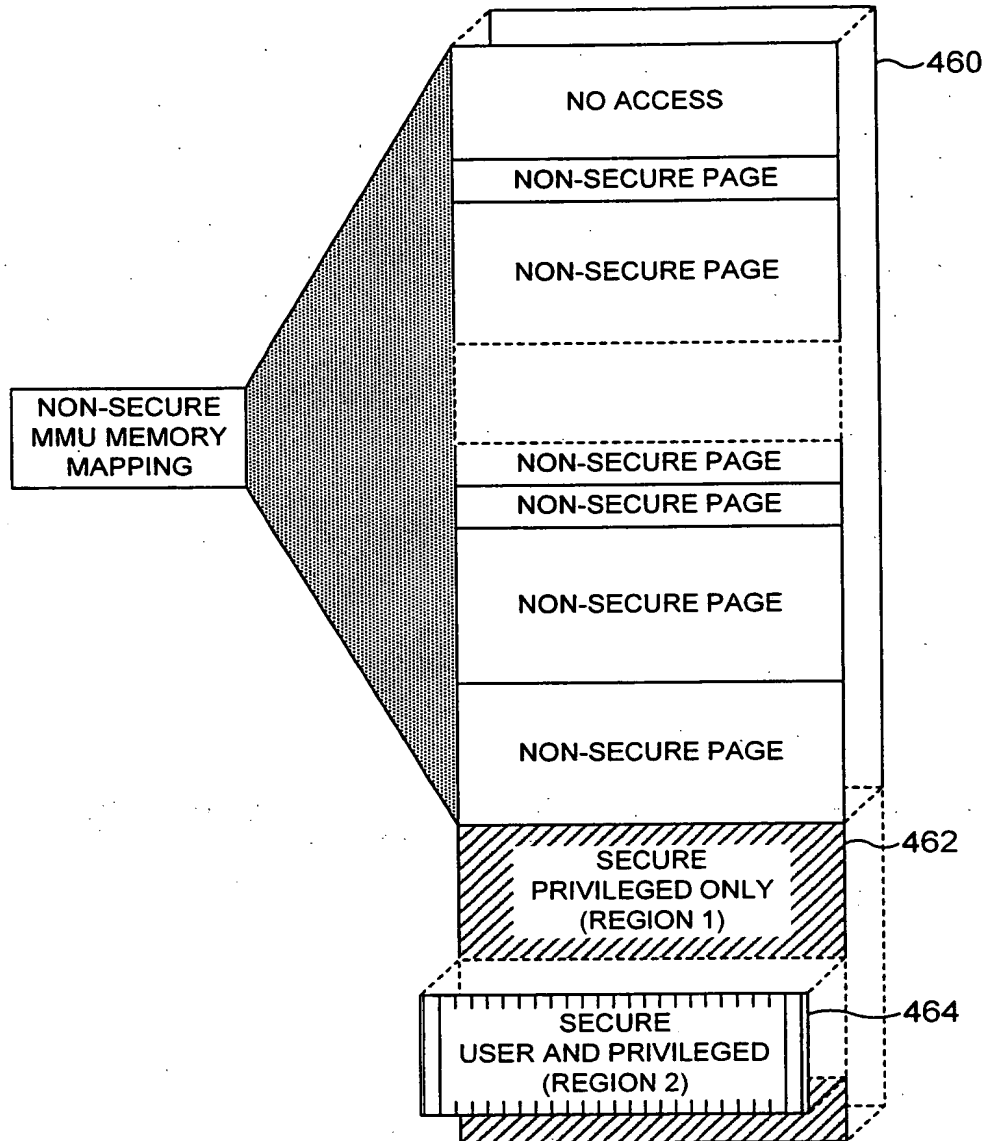


FIG. 45

36 / 56

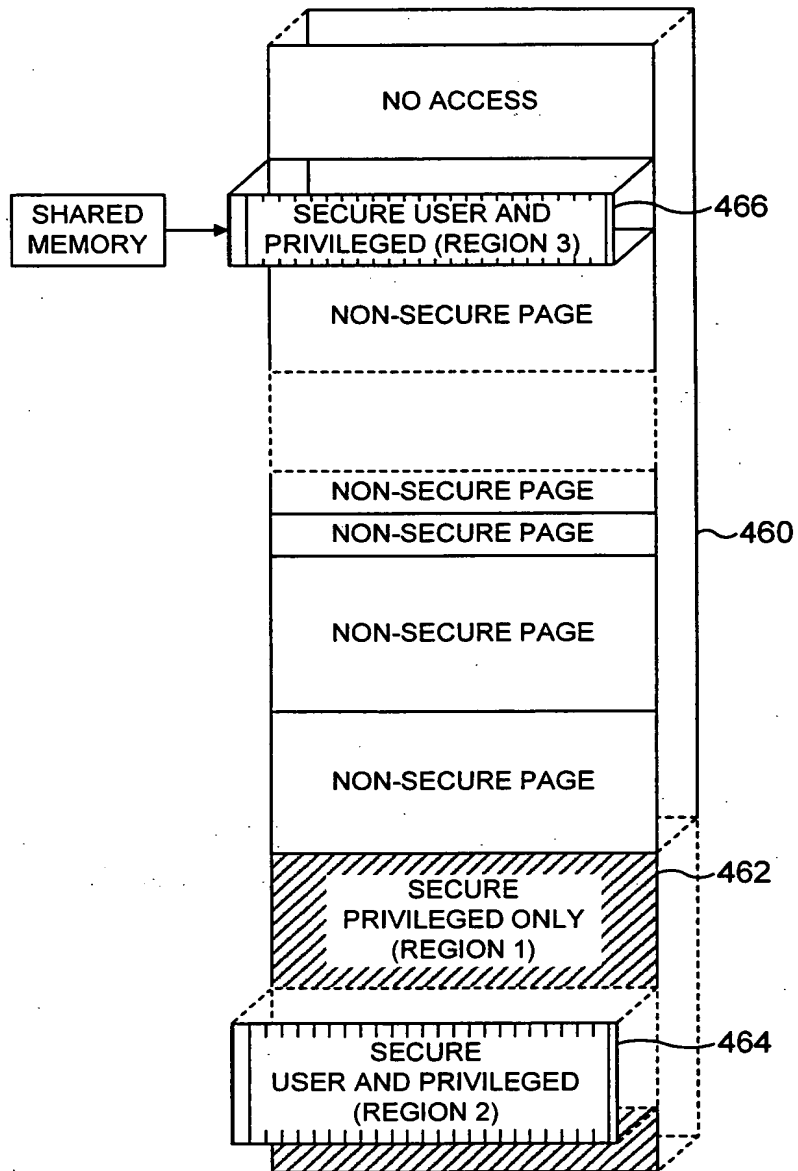


FIG. 46

37 / 56

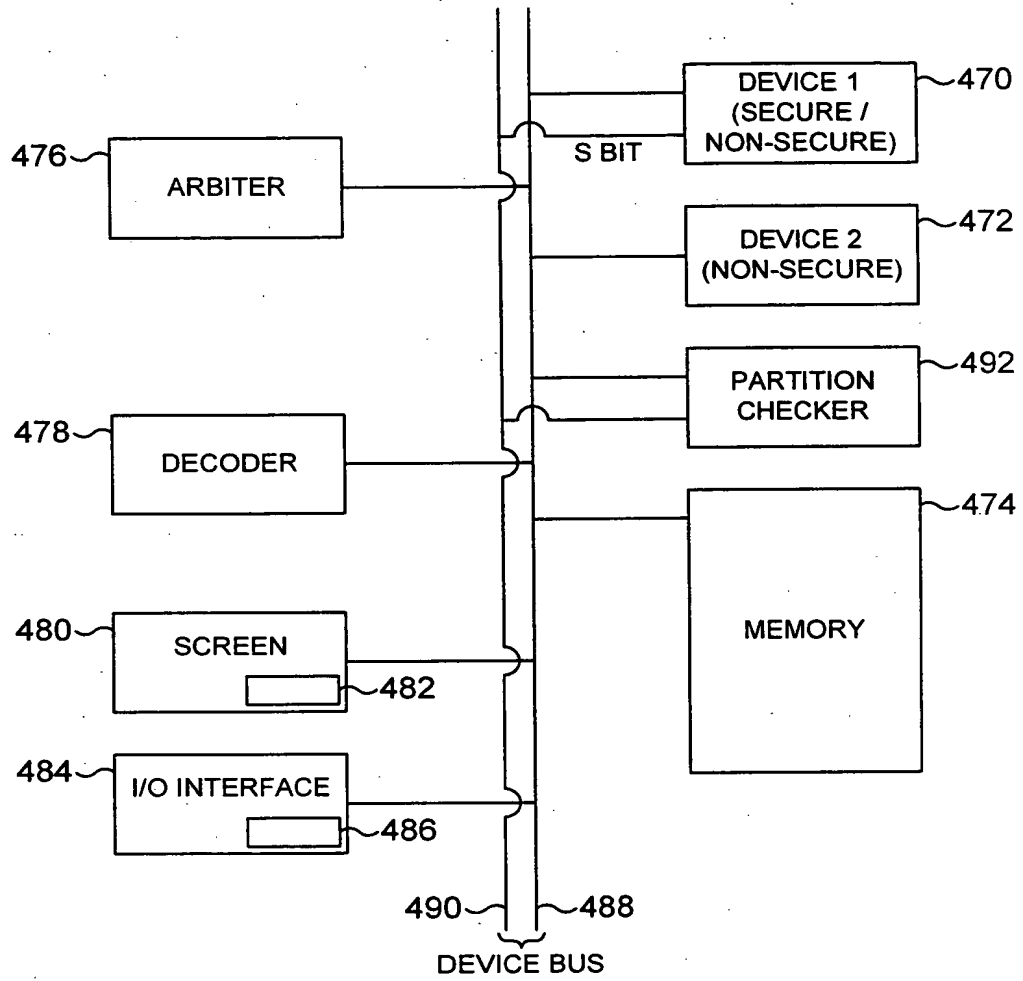


FIG. 47

38 / 56

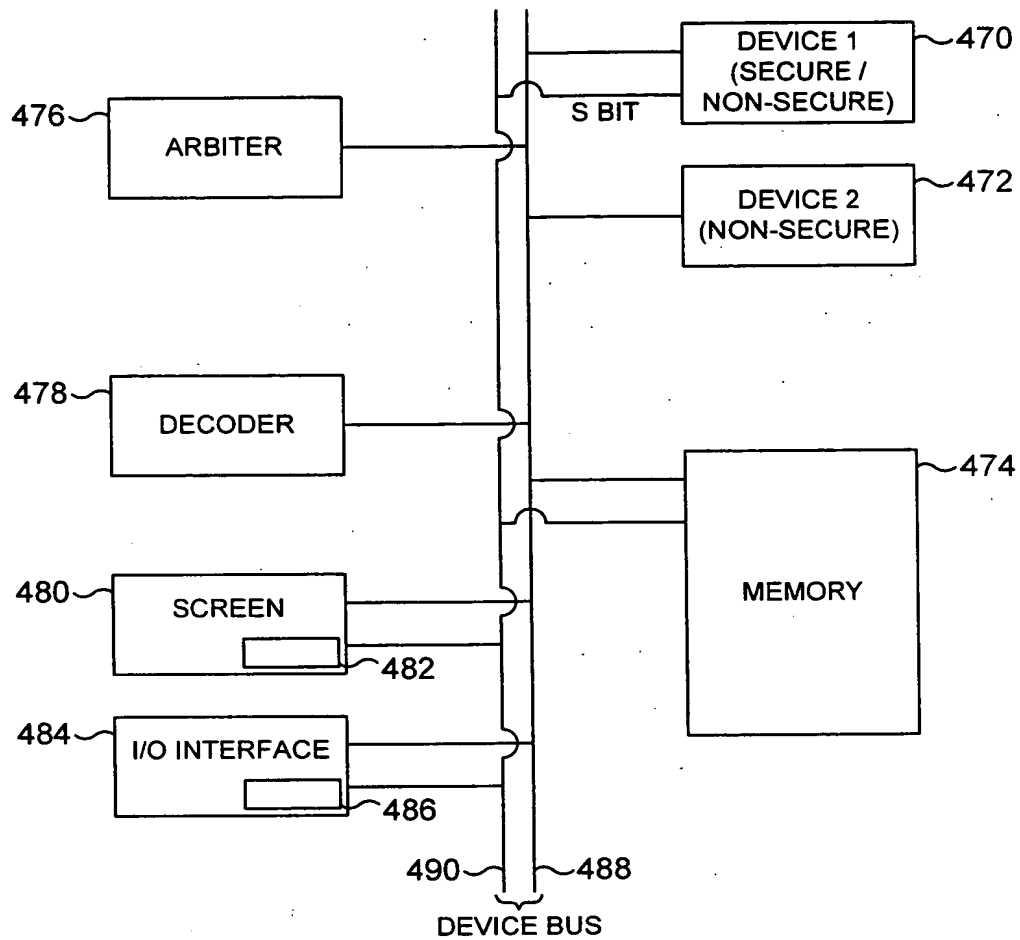


FIG. 48

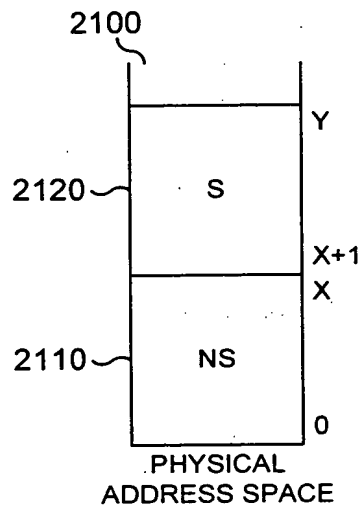


FIG. 49

39 / 56

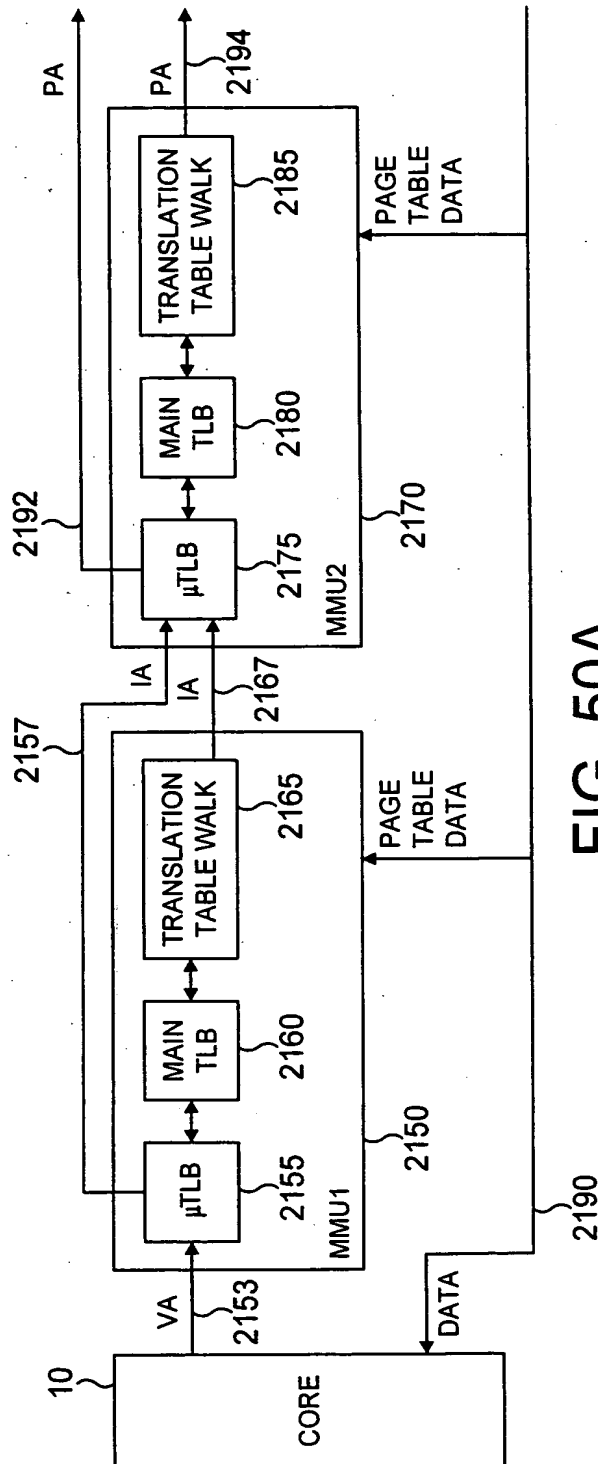


FIG. 50A

40 / 56

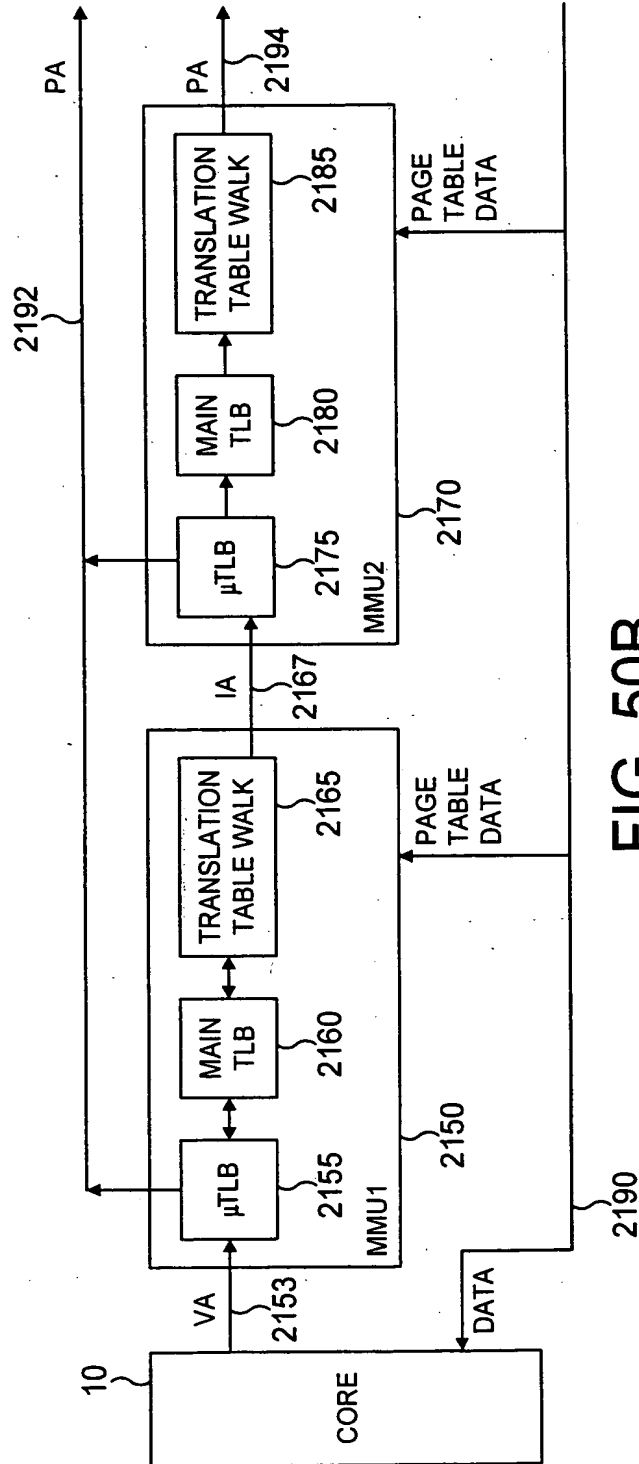


FIG. 50B

41 / 56

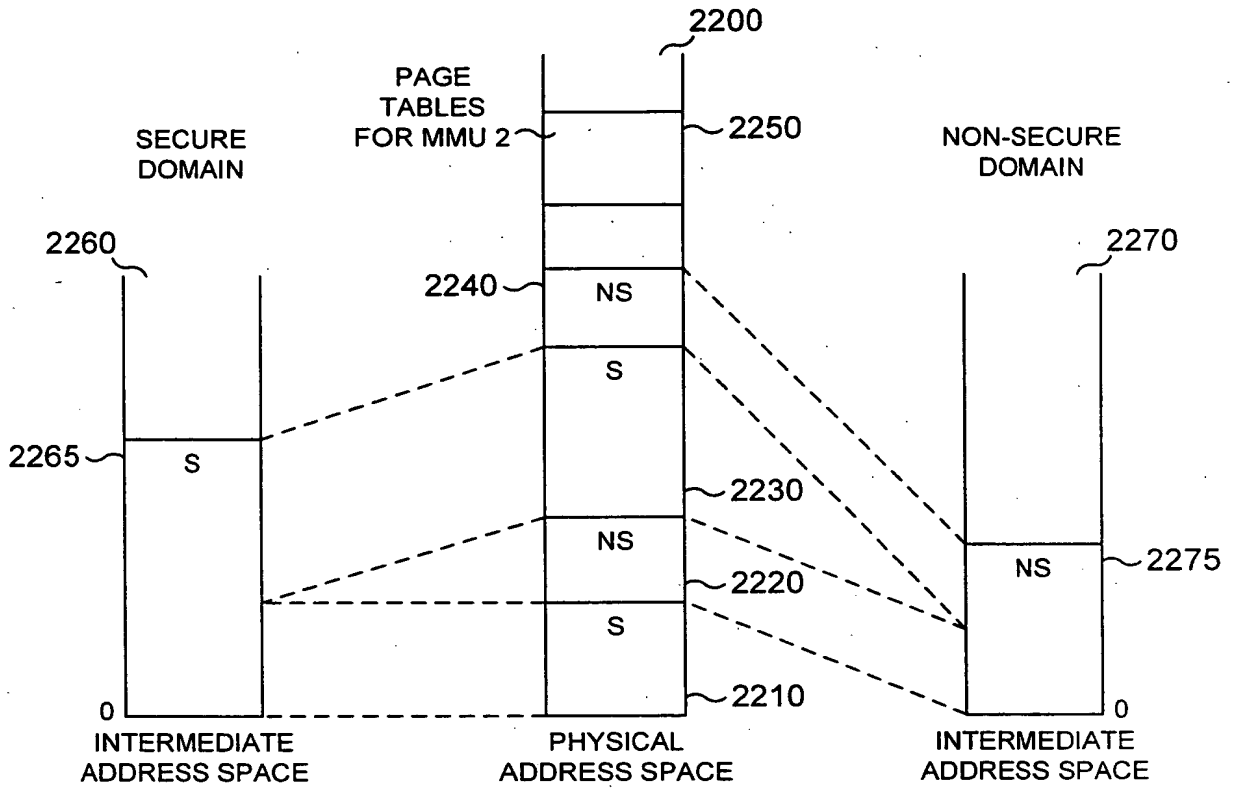


FIG. 51

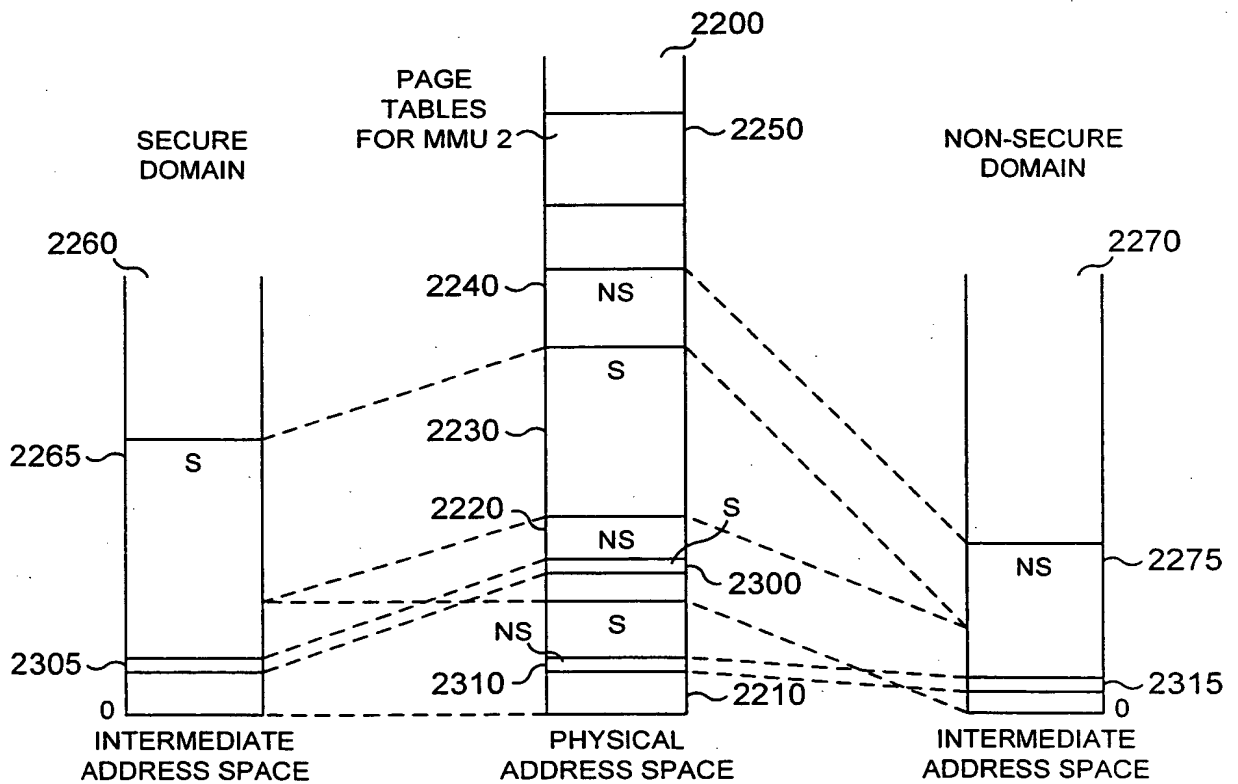


FIG. 52

42 / 56

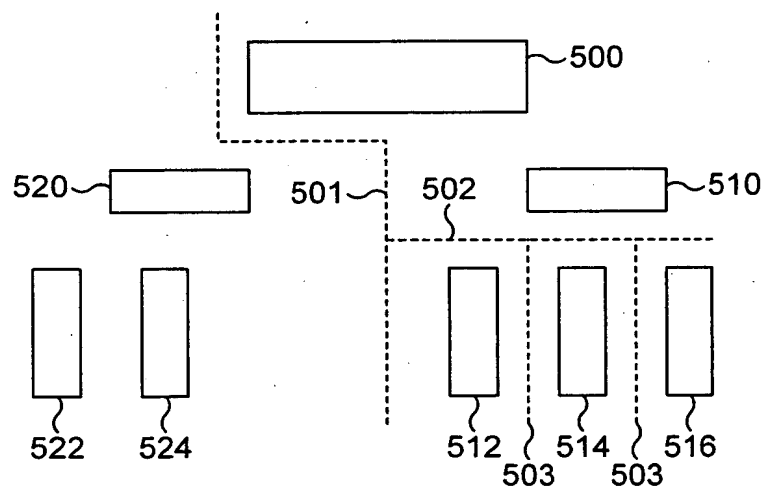
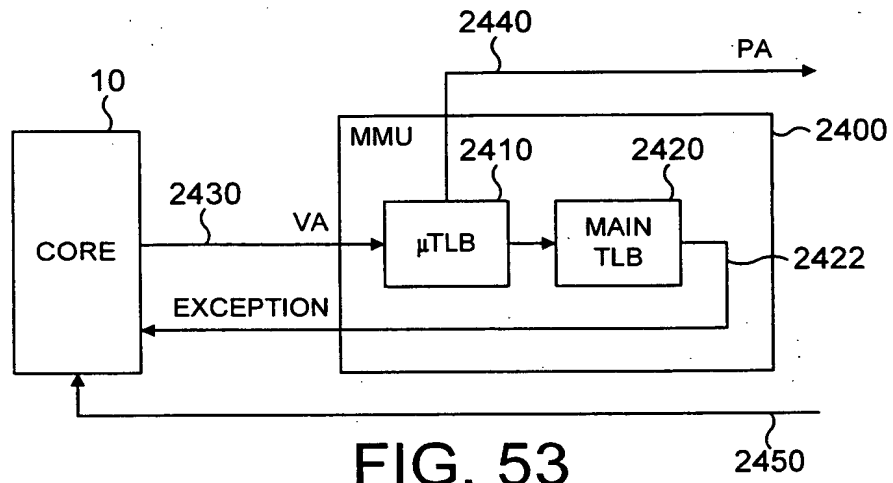


FIG. 59

43 / 56

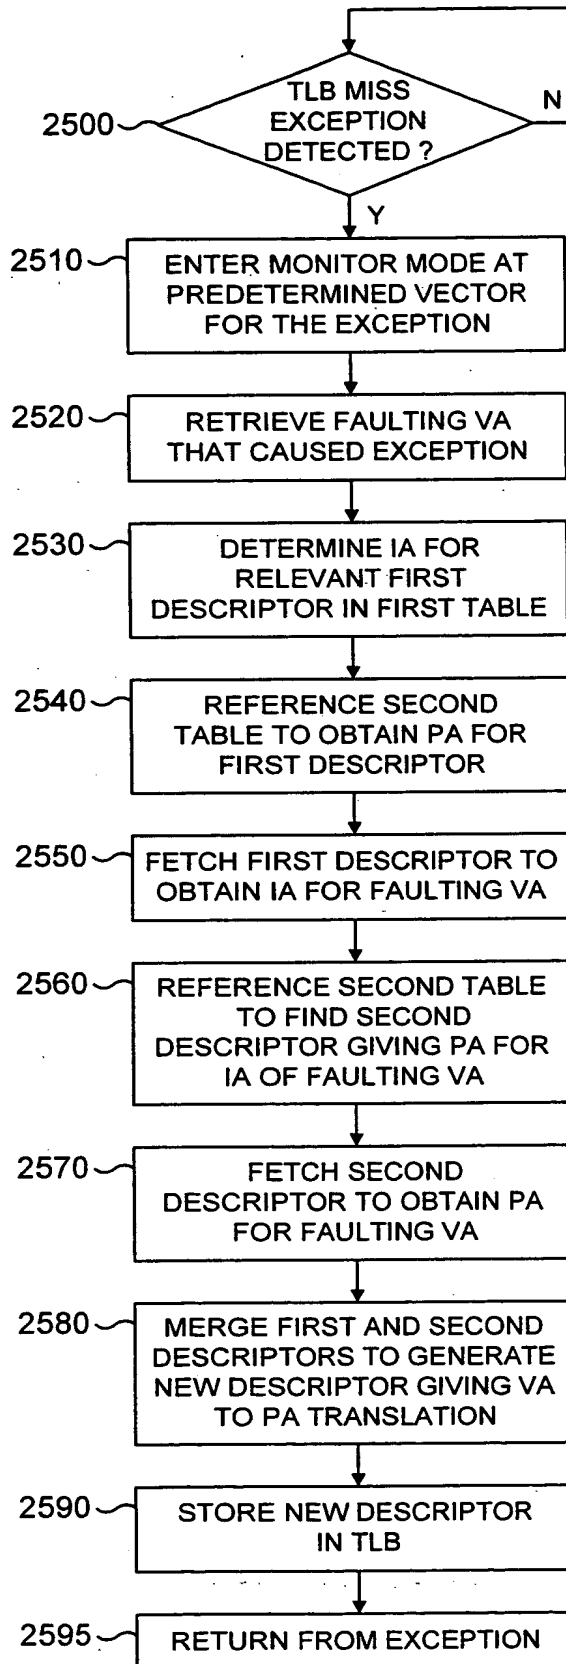


FIG. 54

44 / 56

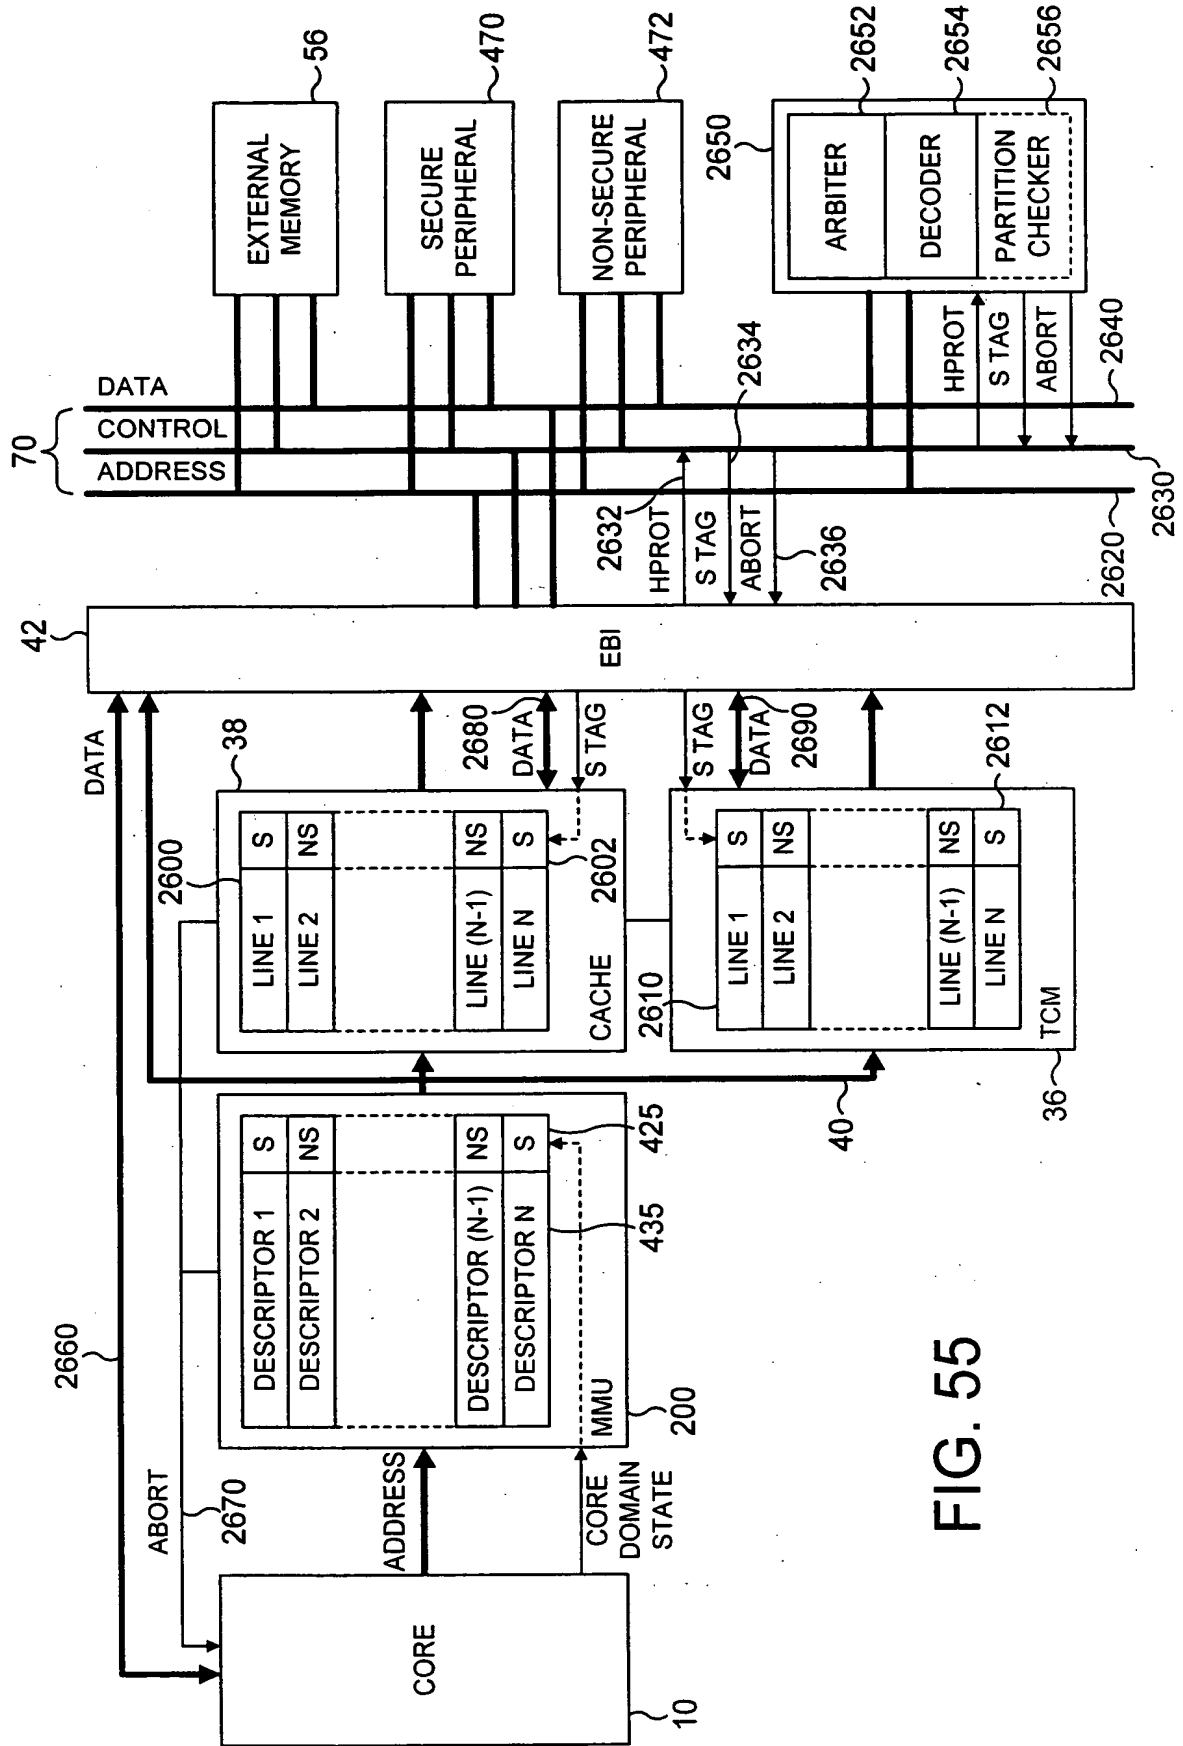


FIG. 55

45 / 56

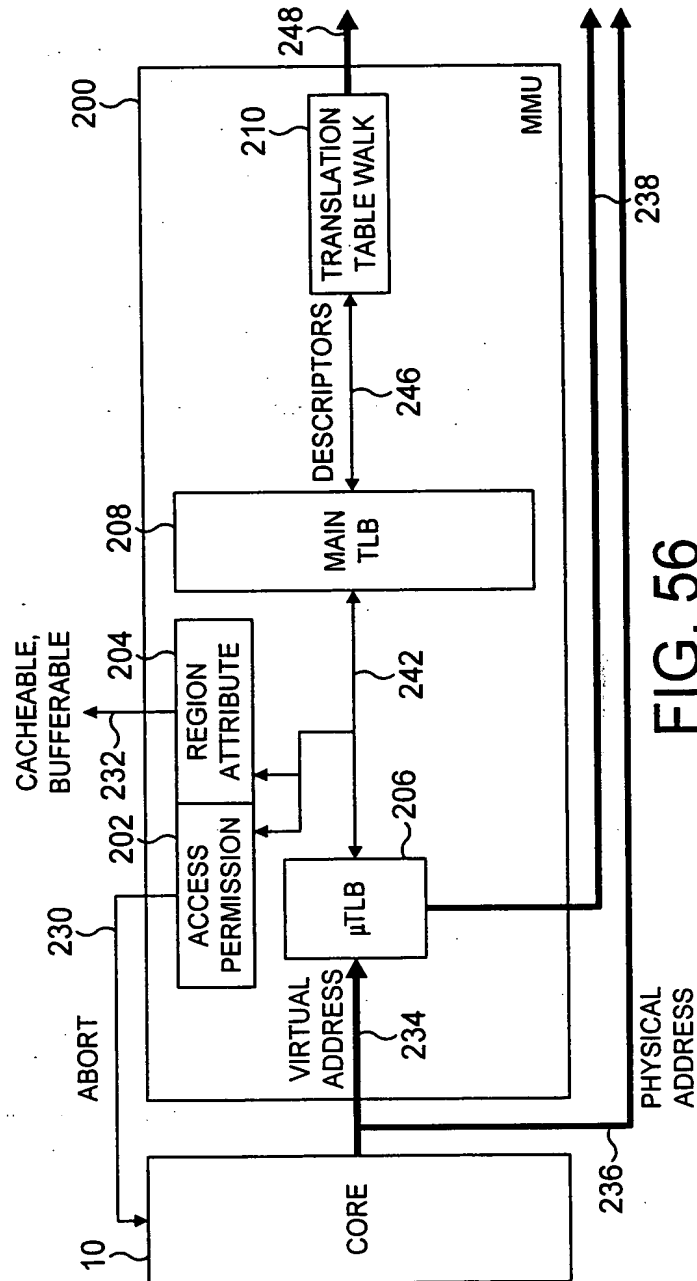


FIG. 56

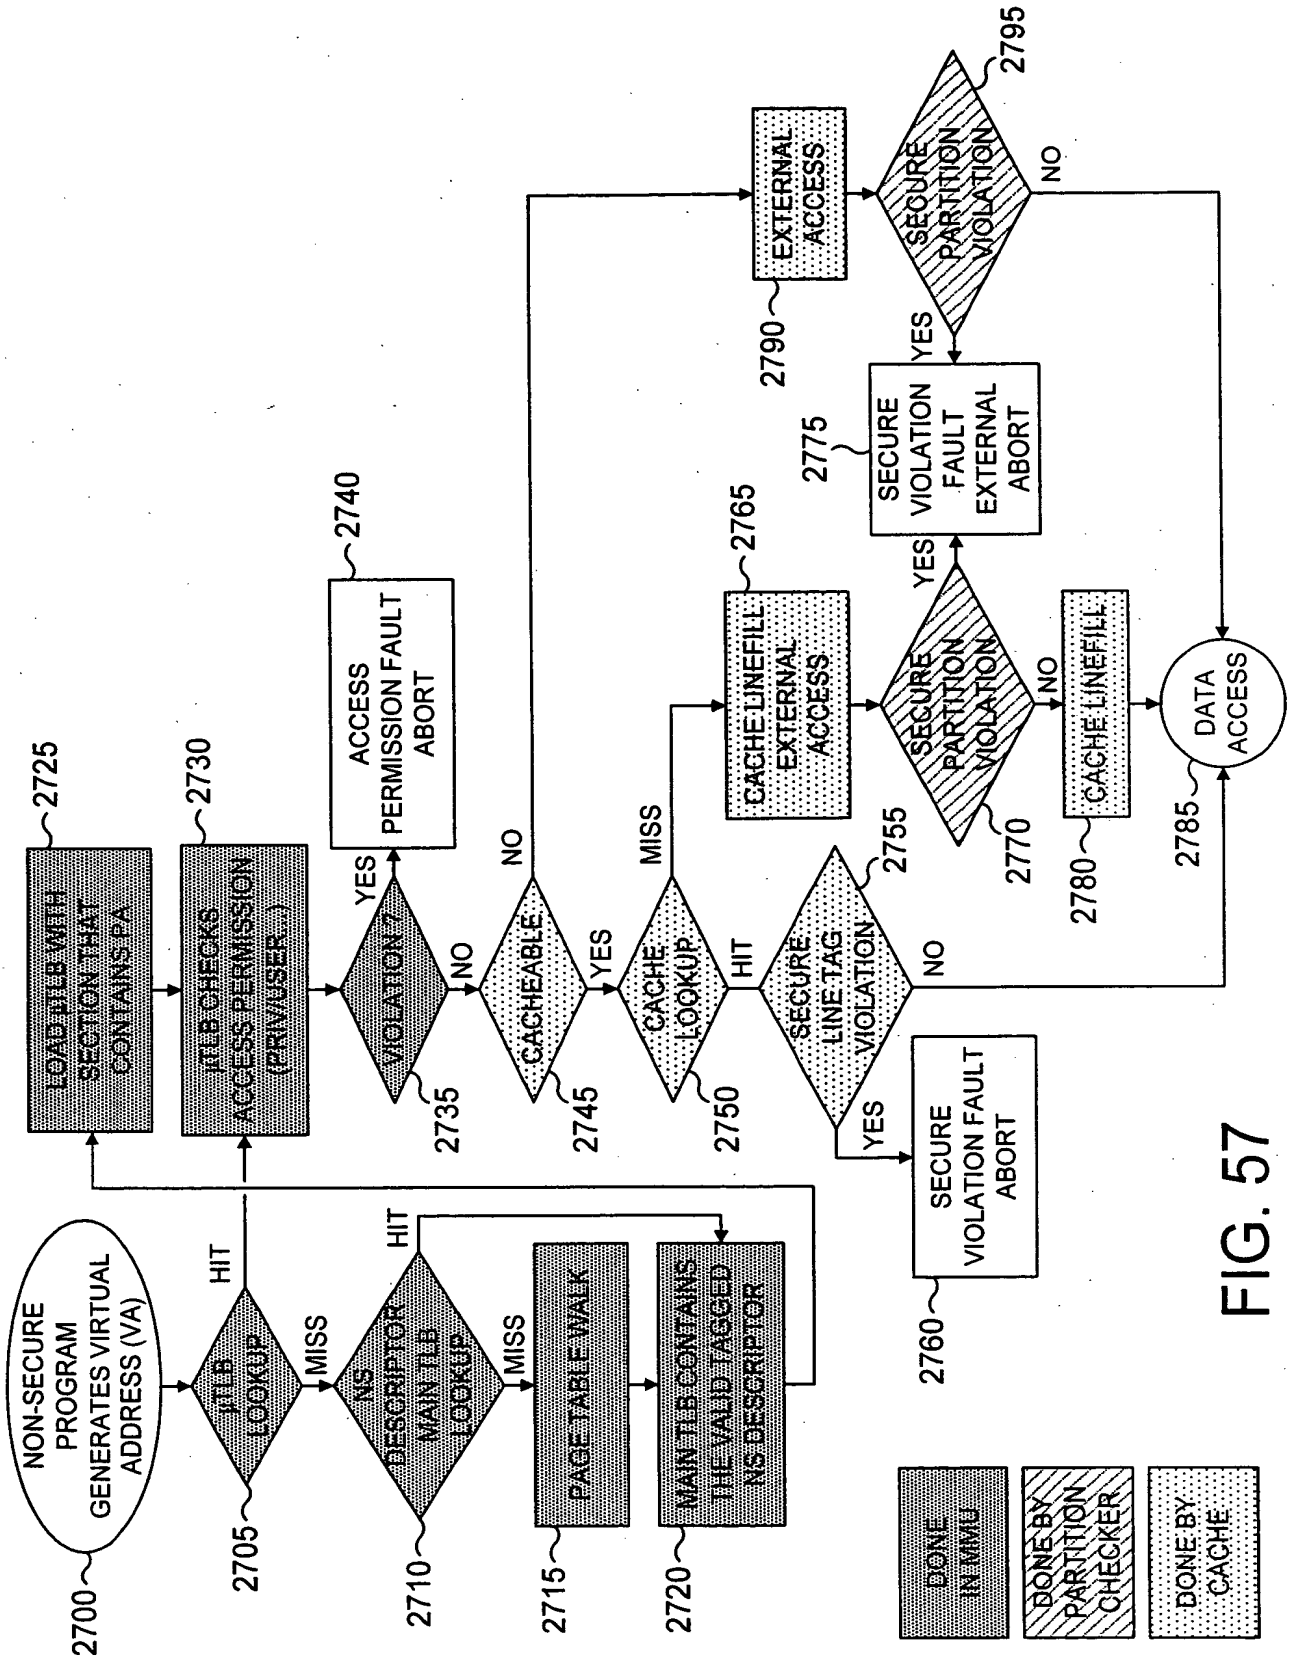


FIG. 57

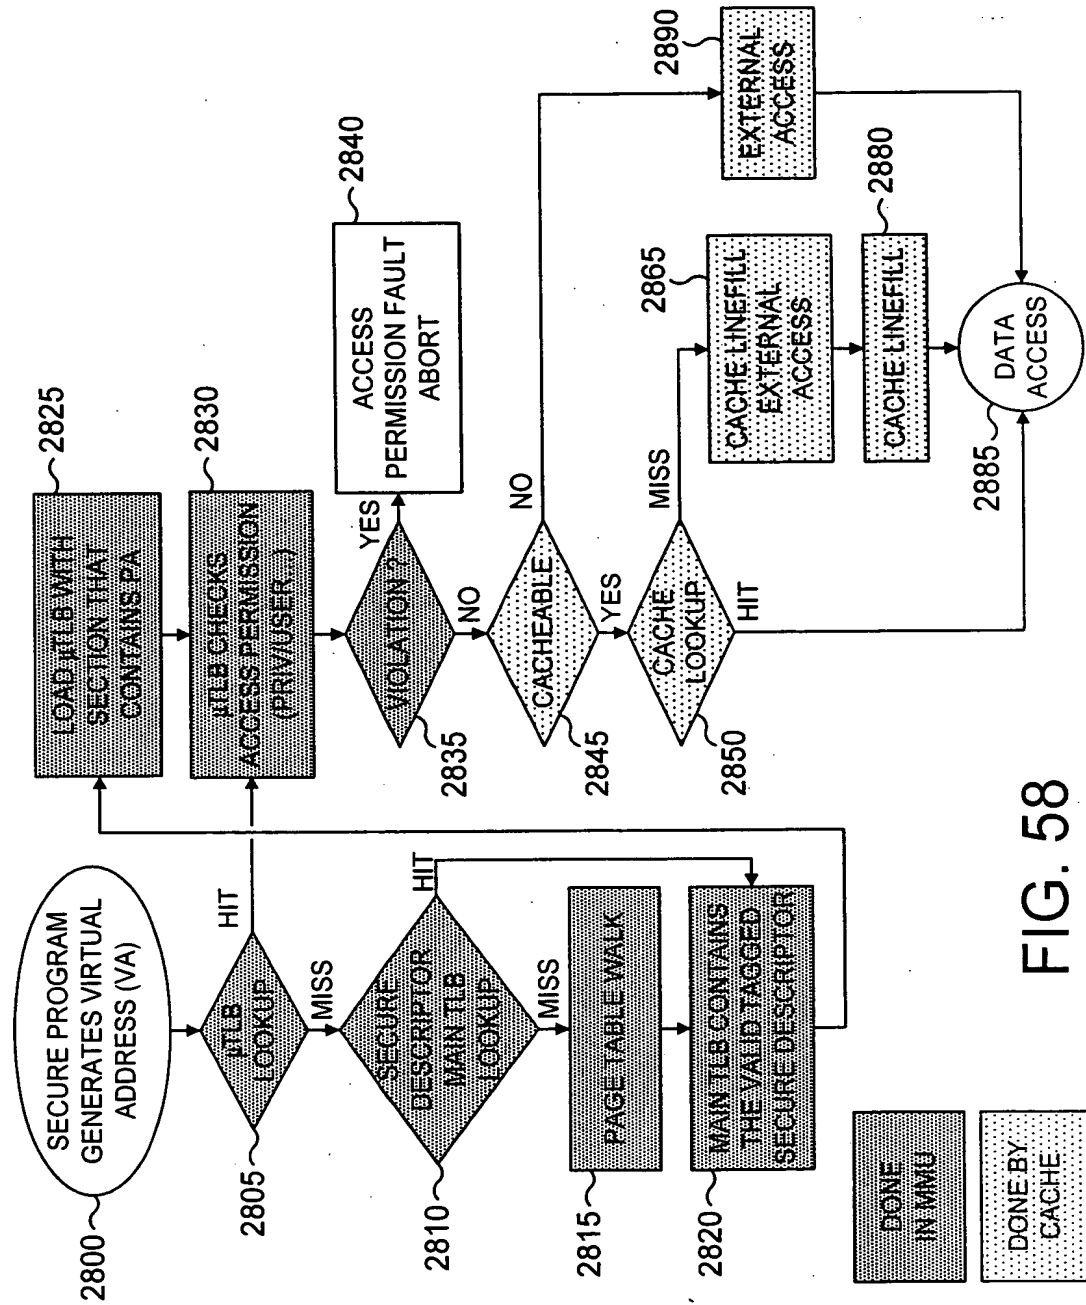


FIG. 58

48 / 56

METHOD OF ENTRY	HOW TO PROGRAM?	HOW TO ENTER?	ENTRY MODE
BREAKPOINT HITS	DEBUG TAP OR SOFTWARE (CP14)	PROGRAM BREAKPOINT REGISTER AND/OR CONTEXT-ID REGISTER AND COMPARISONS SUCCEED WITH INSTRUCTION ADDRESS AND/OR CP15 CONTEXT ID ⁽²⁾	HALT/MONITOR ⁽¹⁾
SOFTWARE BREAKPOINT INSTRUCTION	PUT A BKPT INSTRUCTION INTO SCAN CHAIN 4 (INSTRUCTION TRANSFER REGISTER) THROUGH DEBUG TAP OR USE BKPT INSTRUCTION DIRECTLY IN THE CODE	BKPT INSTRUCTION MUST REACH EXECUTION STAGE	HALT/MONITOR
VECTOR TRAP BREAKPOINT	DEBUG TAP	PROGRAM VECTOR TRAP REGISTER AND ADDRESS MATCHES	HALT/MONITOR
WATCHPOINT HITS	DEBUG TAP OR SOFTWARE (CP14)	PROGRAM WATCHPOINT REGISTER AND/OR CONTEXT-ID REGISTER AND COMPARISONS SUCCEED WITH INSTRUCTION ADDRESS AND/OR CP15 CONTEXT ID ⁽²⁾	HALT/MONITOR ⁽¹⁾
INTERNAL DEBUG REQUEST	DEBUG TAP	HALT INSTRUCTION HAS BEEN SCANNED IN	HALT
EXTERNAL DEBUG REQUEST	NOT APPLICABLE	EDBGRQ INPUT PIN IS ASSERTED	HALT

⁽¹⁾: IN MONITOR MODE, BREAKPOINTS AND WATCHPOINTS CANNOT BE DATA-DEPENDENT.

⁽²⁾: THE CORES HAVE SUPPORT FOR THREAD-AWARE BREAKPOINTS AND WATCHPOINTS IN ORDER TO ABLE TO ENABLE SECURE DEBUG ON SOME PARTICULAR THREADS.



FIG. 60

49 / 56

NAME	MEANING	RESET VALUE	ACCESS	INSERTED IN SCAN CHAIN FOR TEST
MONITOR MODE ENABLE BIT	0: HALT MODE 1: MONITOR MODE	1	R/W BY PROGRAMMING THE ICE BY THE JTAG (SCAN 1) •R/W BY USING MRC/MCR INSTRUCTION (CP14)	YES
SECURE DEBUG ENABLE BIT	0: DEBUG IN NON-SECURE WORLD ONLY 1: DEBUG IN SECURE WORLD AND NON-SECURE WORLD	0	IN FUNCTIONAL MODE OR DEBUG MONITOR MODE: R/W BY USING MRC/MCR INSTRUCTION (CP14) (ONLY IN SECURE SUPERVISOR MODE) IN DEBUG HALT MODE: NO ACCESS - MCR/MRC INSTRUCTIONS HAVE ANY EFFECT (R/W BY PROGRAMMING THE ICE BY THE JTAG (SCAN 1) IF JSDAEN=1)	NO
SECURE TRACE ENABLE BIT	0: ETM IS ENABLED IN NON-SECURE WORLD ONLY. 1: ETM IS ENABLED IN SECURE WORLD AND NON-SECURE WORLD	0	IN FUNCTIONAL MODE OR DEBUG MONITOR MODE: R/W BY USING MRC/MCR INSTRUCTION (CP14) (ONLY IN SECURE SUPERVISOR MODE) IN DEBUG HALT MODE: NO ACCESS - MCR/MRC INSTRUCTIONS HAVE ANY EFFECT (R/W BY PROGRAMMING THE ICE BY THE JTAG (SCAN 1) IF JSDAEN=1)	NO
SECURE USER-MODE ENABLE BIT	0: DEBUG IS NOT POSSIBLE IN SECURE USER MODE 1: DEBUG IS POSSIBLE IN SECURE USER MODE	1	IN FUNCTIONAL MODE OR DEBUG MONITOR MODE: R/W BY USING MRC/MCR INSTRUCTION (CP14) (ONLY IN SECURE SUPERVISOR MODE) IN DEBUG HALT MODE: NO ACCESS - MCR/MRC INSTRUCTIONS HAVE ANY EFFECT (R/W BY PROGRAMMING THE ICE BY THE JTAG (SCAN 1) IF JSDAEN=1)	NO
SECURE THREAD-AWARE ENABLE BIT	0: DEBUG IS NOT POSSIBLE FOR A PARTICULAR THREAD 1: DEBUG IS POSSIBLE FOR A PARTICULAR THREAD	0	IN FUNCTIONAL MODE OR DEBUG MONITOR MODE: R/W BY USING MRC/MCR INSTRUCTION (CP14) (ONLY IN SECURE SUPERVISOR MODE) IN DEBUG HALT MODE: NO ACCESS - MCR/MRC INSTRUCTIONS HAVE ANY EFFECT (R/W BY PROGRAMMING THE ICE BY THE JTAG (SCAN 1) IF JSDAEN=1)	NO

FIG. 61

50 / 56

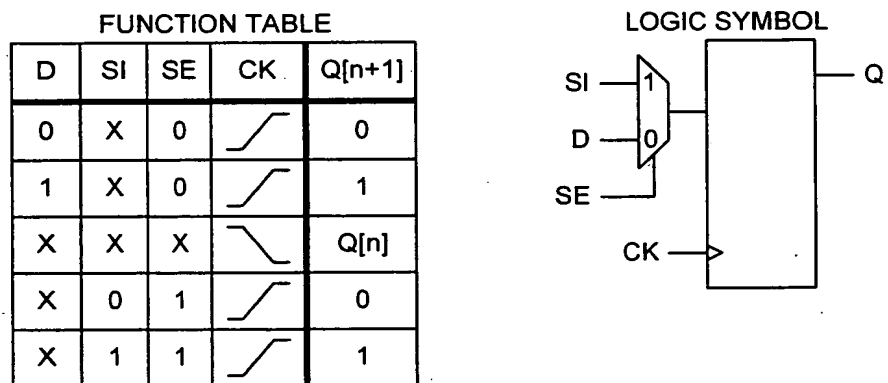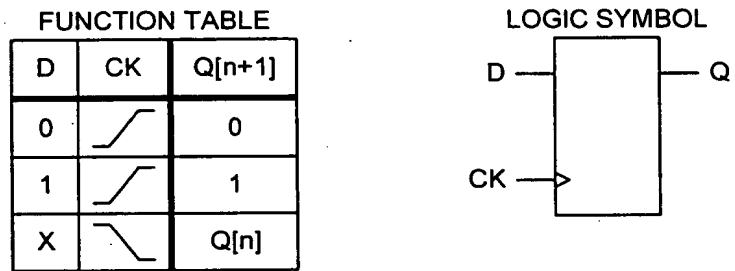

51 / 56

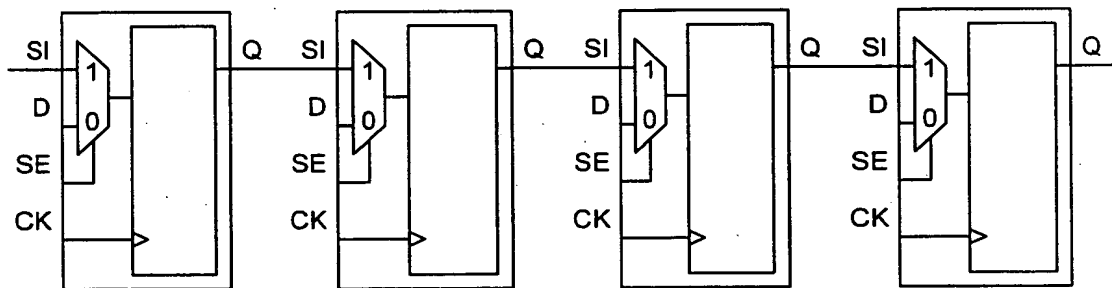


FIG. 64


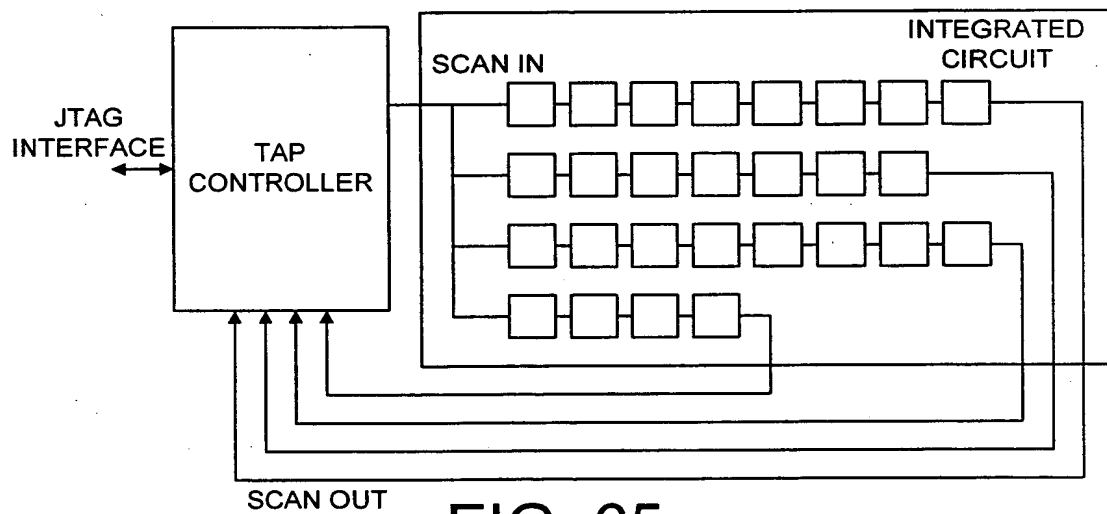


FIG. 65

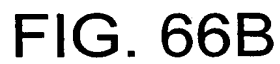

53 / 56

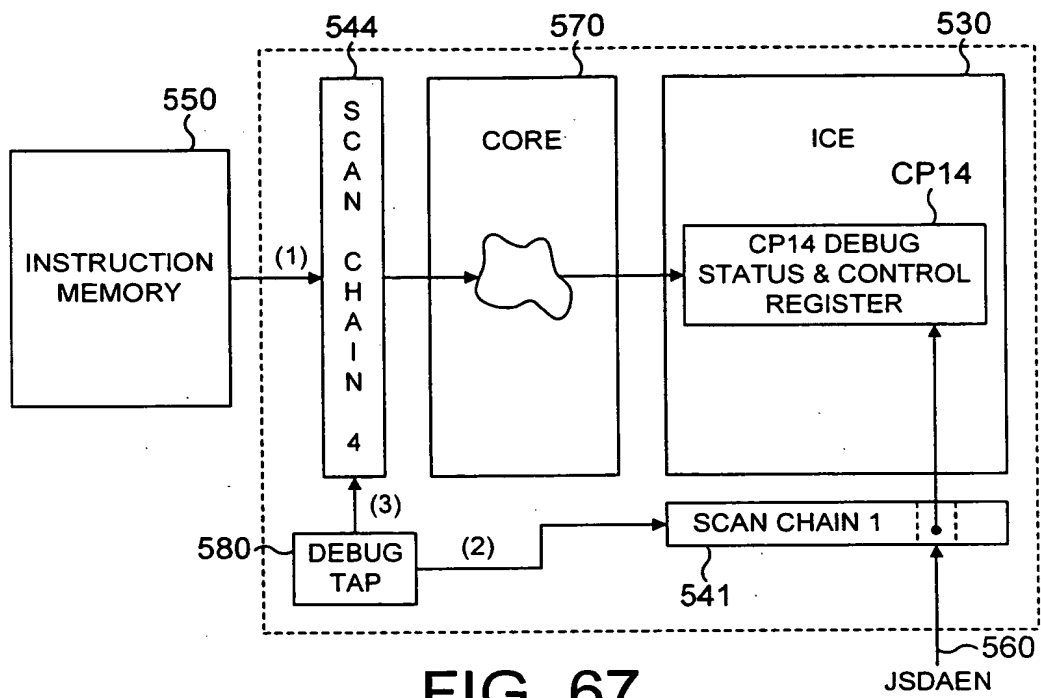


FIG. 67

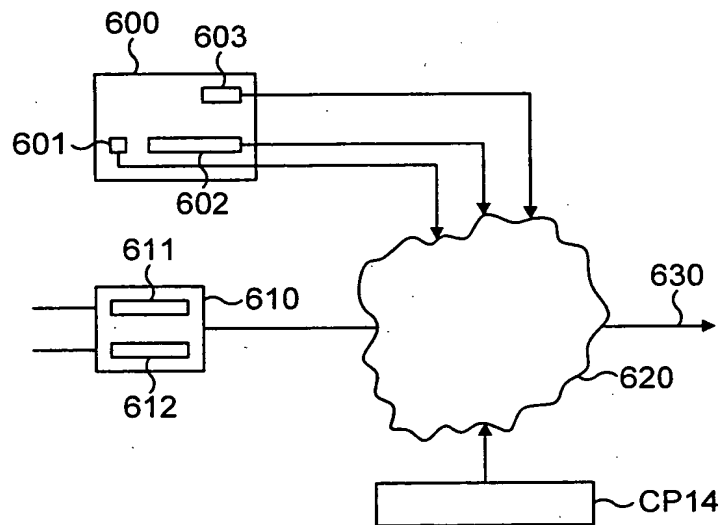


FIG. 68

CP14 BITS IN DEBUG AND STATUS CONTROL REGISTER				MEANING
SECURE DEBUG ENABLE BIT	SECURE USER- MODE DEBUG ENABLE BIT	SECURE THREAD- AWARE DEBUG ENABLE BIT		
0	X	X		NO INTRUSIVE DEBUG IN ENTIRE WORLD IS POSSIBLE. ANY DEBUG REQUEST, BREAKPOINTS, WATCHPOINTS, AND OTHER MECHANISM TO ENTER DEBUG STATE ARE IGNORED IN ENTIRE SECURE WORLD
1	0	X		DEBUG IN ENTIRE SECURE WORLD IS POSSIBLE
1	1	0		DEBUG IN SECURE USER-MODE ONLY. ANY DEBUG REQUEST, BREAKPOINTS, WATCHPOINTS, AND OTHER MECHANISM TO ENTER DEBUG STATE ARE TAKEN INTO ACCOUNT IN USER MODE ONLY. (BREAKPOINTS AND WATCHPOINTS LINKED OR NOT TO A THREAD ID ARE TAKEN INTO ACCOUNT). ACCESS IN DEBUG IS RESTRICTED TO WHAT SECURE USER CAN HAVE ACCESS TO.
1	1	1		DEBUG IS POSSIBLE ONLY IN SOME PARTICULAR THREADS. IN THAT CASE ONLY THREAD-AWARE BREAKPOINTS AND WATCHPOINTS LINKED TO A THREAD ID ARE TAKEN INTO ACCOUNT TO ENTER DEBUG STATE. EACH THREAD CAN MOREOVER DEBUG ITS OWN CODE, AND ONLY ITS OWN CODE.

FIG. 69A

55 / 56

CP14 BITS IN DEBUG AND STATUS CONTROL REGISTER			MEANING
SECURE TRACE ENABLE BIT	SECURE USER-MODE DEBUG ENABLE BIT	SECURE THREAD-AWARE DEBUG ENABLE BIT	
0	X	X	NO OBSERVABLE DEBUG IN ENTIRE SECURE WORLD IS POSSIBLE. TRACE MODULE (ETM) MUST NOT TRACE INTERNAL CORE ACTIVITY
1	0	X	TRACE IN ENTIRE SECURE WORLD IS POSSIBLE
1	1	0	TRACE IS POSSIBLE WHEN THE CORE IS IN SECURE USER-MODE ONLY
1	1	1	TRACE IS POSSIBLE ONLY WHEN THE CORE IS EXECUTING SOME PARTICULAR THREADS IN SECURE USER MODE. PARTICULAR HARDWARE MUST BE DEDICATED FOR THIS, OR RE-USE BREAKPOINT REGISTER PAIR: CONTEXT ID MATCH MUST ENABLE TRACE INSTEAD OF ENTERING DEBUG STATE

FIG. 69B

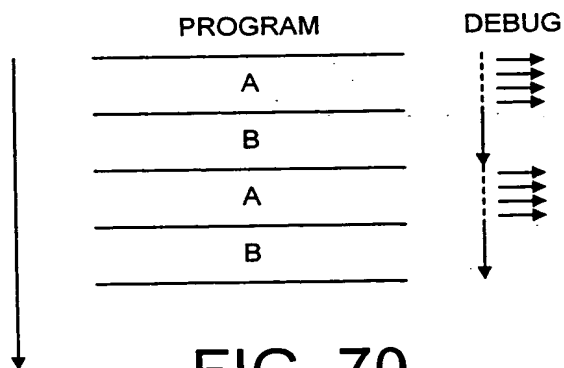


FIG. 70

56 / 56

METHOD OF ENTRY	ENTRY WHEN IN NON-SECURE WORLD	ENTRY WHEN IN SECURE WORLD
BREAKPOINT HITS	NON-SECURE PREFETCH ABORT HANDLER	SECURE PREFETCH ABORT HANDLER
SOFTWARE BREAKPOINT INSTRUCTION	NON-SECURE PREFETCH ABORT HANDLER	SECURE PREFETCH ABORT HANDLER
VECTOR TRAP BREAKPOINT	DISABLED FOR NON-SECURE DATA ABORT AND NON-SECURE PREFETCH ABORT INTERRUPTIONS. FOR OTHER NON-SECURE EXCEPTIONS, PREFETCH ABORT	DISABLED FOR SECURE DATA ABORT AND SECURE PREFETCH ABORT EXCEPTIONS ⁽¹⁾ . FOR OTHER EXCEPTIONS, SECURE PREFETCH ABORT
WATCHPOINT HITS	NON-SECURE DATA ABORT HANDLER	SECURE DATA ABORT HANDLER
INTERNAL DEBUG REQUEST	DEBUG STATE IN HALT MODE	DEBUG STATE IN HALT MODE
EXTERNAL DEBUG REQUEST	DEBUG STATE IN HALT MODE	DEBUG STATE IN HALT MODE

⁽¹⁾ SEE INFORMATION ON VECTOR TRAP REGISTER

⁽²⁾ NOTE THAT WHEN EXTERNAL OR INTERNAL DEBUG REQUEST IS ASSERTED, THE CORE ENTERS HALT MODE AND NOT MONITOR MODE

FIG. 71A

METHOD OF ENTRY	ENTRY IN NON-SECURE WORLD	ENTRY IN SECURE WORLD
BREAKPOINT HITS	NON-SECURE PREFETCH ABORT HANDLER	BREAKPOINT IGNORED
SOFTWARE BREAKPOINT INSTRUCTION	NON-SECURE PREFETCH ABORT HANDLER	INSTRUCTION IGNORED ⁽¹⁾
VECTOR TRAP BREAKPOINT	DISABLED FOR NON-SECURE DATA ABORT AND NON-SECURE PREFETCH ABORT INTERRUPTIONS. FOR OTHER INTERRUPTION NON-SECURE PREFETCH ABORT	BREAKPOINT IGNORED
WATCHPOINT HITS	NON-SECURE DATA ABORT HANDLER	WATCHPOINT IGNORED
INTERNAL DEBUG REQUEST	DEBUG STATE IN HALT MODE	REQUEST IGNORED
EXTERNAL DEBUG REQUEST	DEBUG STATE IN HALT MODE	REQUEST IGNORED
DEBUG RE-ENTRY FROM SYSTEM SPEED ACCESS	NOT APPLICABLE	NOT APPLICABLE

⁽¹⁾ AS SUBSTITUTION OF BKPT INSTRUCTION IN SECURE WORLD FROM NON-SECURE WORLD IS NOT POSSIBLE, NON-SECURE ABORT MUST HANDLE THE VIOLATION.

FIG. 71B

**This Page is Inserted by IFW Indexing and Scanning
Operations and is not part of the Official Record**

BEST AVAILABLE IMAGES

Defective images within this document are accurate representations of the original documents submitted by the applicant.

Defects in the images include but are not limited to the items checked:

- ☐ BLACK BORDERS
- ☐ IMAGE CUT OFF AT TOP, BOTTOM OR SIDES
- ☒ FADED TEXT OR DRAWING
- ☐ BLURRED OR ILLEGIBLE TEXT OR DRAWING
- ☐ SKEWED/SLANTED IMAGES
- ☐ COLOR OR BLACK AND WHITE PHOTOGRAPHS
- ☐ GRAY SCALE DOCUMENTS
- ☐ LINES OR MARKS ON ORIGINAL DOCUMENT
- ☐ REFERENCE(S) OR EXHIBIT(S) SUBMITTED ARE POOR QUALITY
- ☐ OTHER: _____

IMAGES ARE BEST AVAILABLE COPY.

As rescanning these documents will not correct the image problems checked, please do not report these problems to the IFW Image Problem Mailbox.